



**CUTWATER**

**CUTWATER 30**  
OWNERS MANUAL





# TABLE OF CONTENTS

|  |    |
|--|----|
| Table Of Contents .....  | 2  |
| Congratulations .....  | 3  |
| Safety .....   | 3  |
| Symbol Glossary .....  | 4  |
| Specifications ( <i>Subject To Change Without Notice</i> ) ..... | 5  |
| Equipment Location .....   | 6  |
| Starboard Fittings .....   | 6  |
| Port Fittings .....  | 7  |
| Main Cabin Top Deck Components .....                             | 8  |
| Stern Components .....   | 9  |
| Fuse Location & Values .....                                     | 10 |
| Main Cabin And Cockpit Lights .....                              | 12 |
| Battery Compartment .....  | 13 |
| Power Distribution Center .....                                  | 14 |
| AC Distribution Panel, Rotary Switch & DV Volt Meter .....       | 15 |
| Fuel System, Engine, Generator & Webasto Furnace .....           | 16 |
| Webasto Furnace .....  | 17 |
| Air Conditioning System .....                                    | 18 |
| Generator .....  | 19 |
| Solar Panel .....  | 20 |
| Shore Power .....  | 21 |
| Closed Engine Cooling System .....                               | 22 |
| Sea Strainer System .....  | 23 |
| Raw Water Wash Down .....  | 24 |
| Fresh Water Plumbing System .....                                | 25 |
| Shower Sump .....  | 26 |
| Bilge Pump System .....  | 27 |
| Waste System .....   | 28 |
| Mast Set Up And Takedown .....                                   | 29 |
| Cutwater 30 Wiring Schematic (Acc. 1) .....                      | 30 |
| Cutwater 30 Wiring Schematic (Acc. 2) .....                      | 31 |
| Cutwater 30 Wiring Schematic (Acc. 3) .....                      | 32 |
| Cutwater 30 Wiring Schematic (Lighting) .....                    | 33 |
| Cutwater 30 Wiring Schematic (P.D.P.) .....                      | 34 |
| Working Deck .....   | 35 |
| Care And Maintenance .....                                       | 36 |
| Example Of A Preparation For The Road Checklist .....            | 36 |
| Example Of A Spring Pre-Launch Checklist .....                   | 37 |
| Example Of Winter Storage Checklist .....                        | 38 |
| Reference Material .....   | 39 |
| Contacts .....   | 40 |
| Notes .....  | 41 |

## CONGRATULATIONS

The Cutwater family has a passion for boating. We are committed to continuous process improvement in all areas that affect our customer's satisfaction with our products and providing great customer service.

## SAFETY

Safety is always a concern at Cutwater. Please read all manuals to ensure that equipment is used in a safe manner. We highly recommend attendance in a Coast Guard approved boating safety course. Such courses are available from the Coast Guard directly or from boating organizations. Owners should have annual inspections to ensure that all safety equipment is current.

# SYMBOL GLOSSARY



Attention! – Important Operating or Maintenance Instructions



Attention! – Electrical Shock Hazard



Fresh Water



Black Water



Fuel



Standard Equipment



Optional Equipment



Hints



# SPECIFICATIONS

## C30

|  |                          |          |
|--|--------------------------|----------|
| LOA molded .....                               | 30' - 0"                 | 9.14 m   |
| LOA rigged (with swim platform & pulpit) ..... | 34' - 4"                 | 10.46 m  |
| Bridge clearance (mast folded) .....           | 9' - 9"                  | 2.97 m   |
| Height on trailer .....                        | 13' - 2"                 | 4.01 m   |
| Beam .....                                     | 10' - 0"                 | 3.05 m   |
| Draft .....                                    | 2' - 5"                  | .73 m    |
| Fuel capacity .....                            | 180 U.S. Gal             | 681.4 L  |
| Water capacity .....                           | 80 U.S. Gal              | 302.8 L  |
| Holding tank capacity .....                    | 40 U.S. Gal              | 151.4 L  |
| Weight dry .....                               | 10,200 lbs               | 4,626 kg |
| Engine .....                                   | D6 Volvo 435 H.P. Diesel |          |

## C30 SPORT TOP

|  |                          |          |
|--|--------------------------|----------|
| LOA molded .....                               | 30' - 0"                 | 9.14 m   |
| LOA rigged (with swim platform & pulpit) ..... | 34' - 4"                 | 10.46 m  |
| Bridge clearance (mast folded) .....           | 9' - 9"                  | 2.97 m   |
| Height on trailer .....                        | 13' - 2"                 | 4.01 m   |
| Beam .....                                     | 10' - 0"                 | 3.05 m   |
| Draft .....                                    | 2' - 5"                  | .73 m    |
| Fuel capacity .....                            | 180 U.S. Gal             | 681.4 L  |
| Water capacity .....                           | 80 U.S. Gal              | 302.8 L  |
| Holding tank capacity .....                    | 40 U.S. Gal              | 151.4 L  |
| Weight dry .....                               | 10,200 lbs               | 4,626 kg |
| Engine .....                                   | D6 Volvo 435 H.P. Diesel |          |

## C30 COMMAND BRIDGE

|  |                          |          |
|--|--------------------------|----------|
| LOA molded .....                               | 30' - 0"                 | 9.14 m   |
| LOA rigged (with swim platform & pulpit) ..... | 34' - 4"                 | 10.46 m  |
| Bridge clearance (bridge folded) .....         | 9' - 9"                  | 2.97 m   |
| Height on trailer .....                        | 13' - 2"                 | 4.01 m   |
| Beam .....                                     | 10' - 0"                 | 3.05 m   |
| Draft .....                                    | 2' - 5"                  | .73 m    |
| Fuel capacity .....                            | 180 U.S. Gal             | 681.4 L  |
| Water capacity .....                           | 80 U.S. Gal              | 302.8 L  |
| Holding tank capacity .....                    | 40 U.S. Gal              | 151.4 L  |
| Weight dry .....                               | 10,980 lbs               | 4,980 kg |
| Engine .....                                   | D6 Volvo 435 H.P. Diesel |          |

*(Subject to Change Without Notice)*

# EQUIPMENT LOCATION

## STARBOARD FITTINGS

STD


1 2 3 4 5 6 7 8 10 11

OPT

9



Keep all vents, drains and exhausts clear of any obstructions to ensure proper performance of each system.

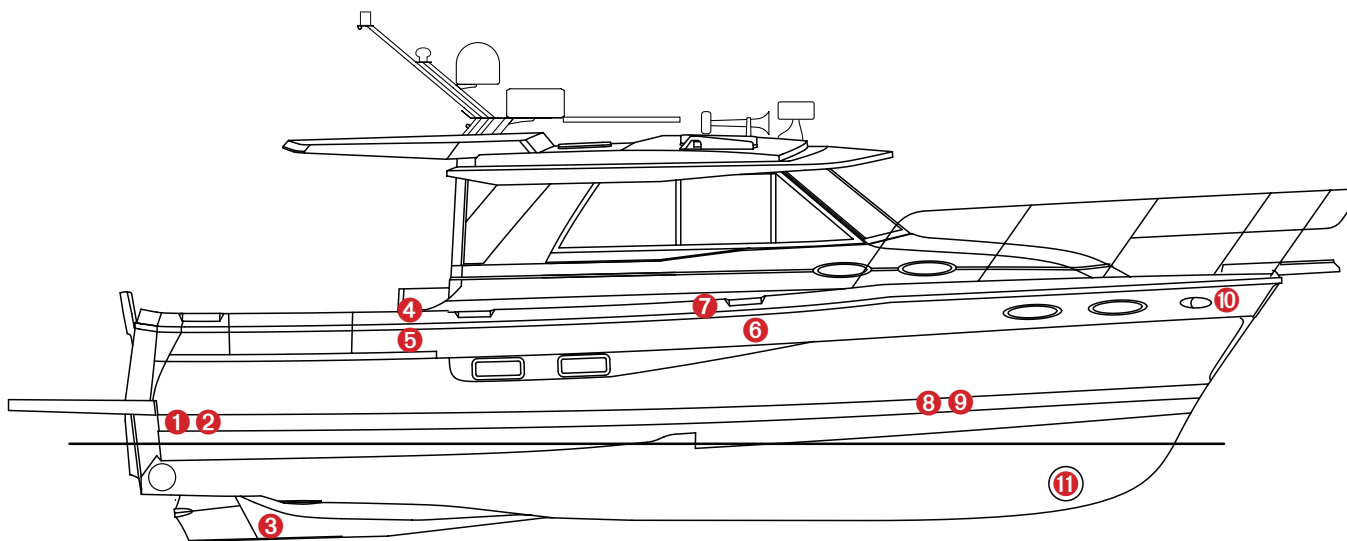

- |                   |                   |
|-------------------|-------------------|
| ① Aft Bilge       | ⑦ Waste Pump Out  |
| ② Forward Bilge   | ⑧ Head Sink Drain |
| ③ Keel Drain Plug | ⑨ Macerator       |
| ④ Diesel Fill     | ⑩ Docking Lights  |
| ⑤ Fuel Vent       | ⑪ Bow Thruster    |
| ⑥ Waste Vent      |                   |

# PORT FITTINGS

STD


1 2 3 5 6 7 9 10

OPT

4 8 11



Keep all vents, drains and exhausts clear of any obstructions to ensure proper performance of each system.

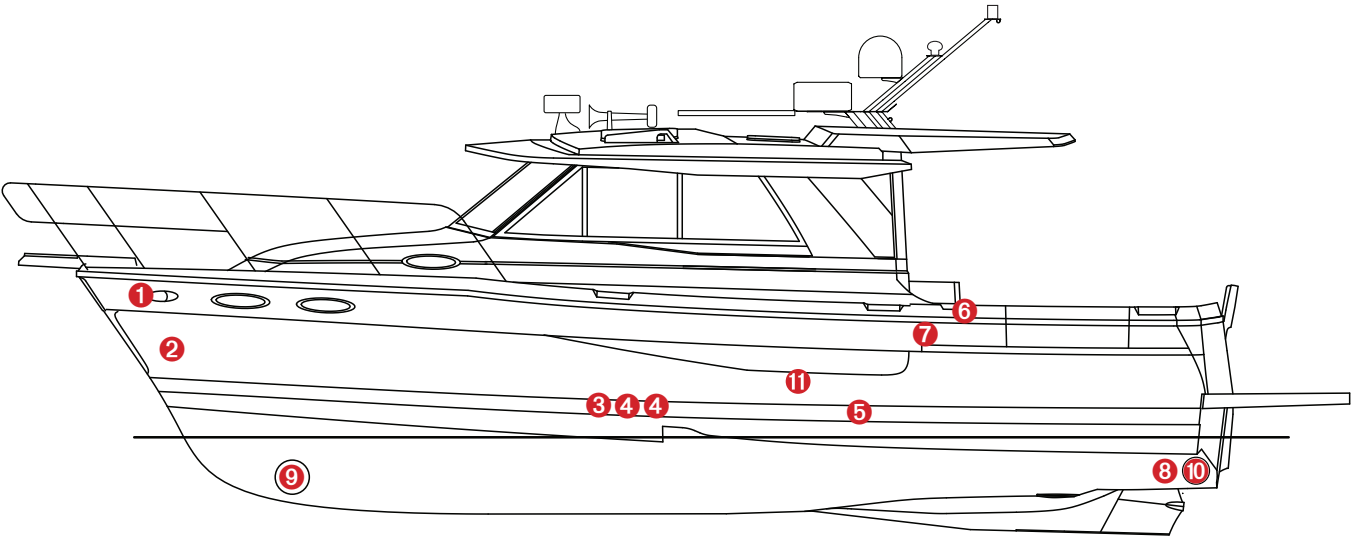

- |                         |                           |
|-------------------------|---------------------------|
| 1 Docking Lights        | 7 Freshwater Vent         |
| 2 Anchor Locker Drain   | 8 Generator Exhaust       |
| 3 Shower Sump           | 9 Bow Thruster            |
| 4 Air Conditioner Drain | 10 Engine Exhaust         |
| 5 Galley Sink Drain     | 11 Webasto Heater Exhaust |
| 6 Freshwater Fill       |                           |




## MAIN CABIN TOP DECK COMPONENTS

**STD**


1 2 3 6 7

**OPT**


4 5 8

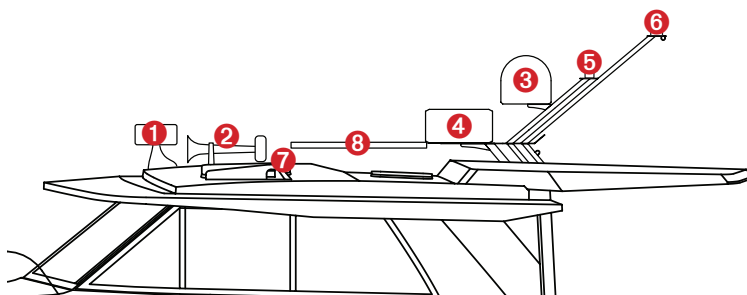

Sedan

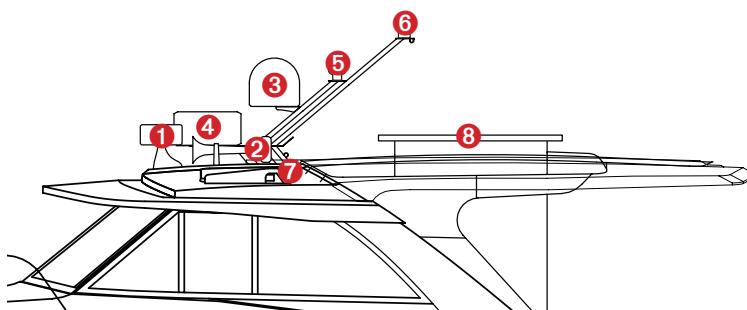

Sport Top

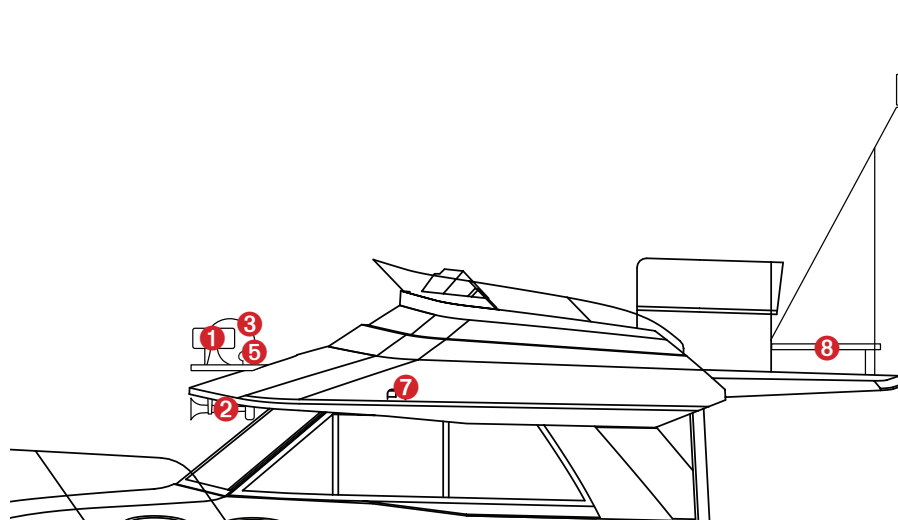

Command Bridge

- |   |                         |
|---|-------------------------|
| ① Searchlight   | ⑤ XM-Weather Antennae   |
| ② Horn  | ⑥ Anchor Light          |
| ③ Digital TV Antennae<br>(satellite ready - not included) | ⑦ Port Navigation Light |
| ④ Radar   | ⑧ Solar Panel           |


## STERN COMPONENTS

**STD**

1 2 4 5 6 7 8 9 10

**OPT**

3

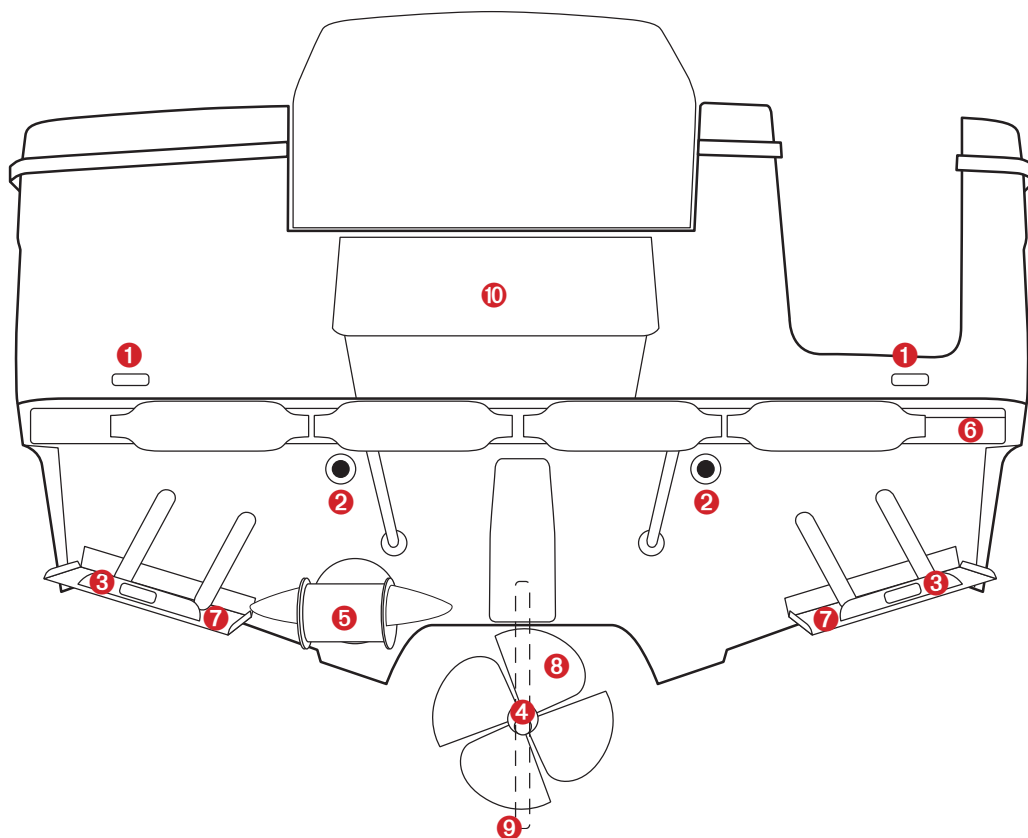

- ① Courtesy Lights
- ② Cockpit Drains
- ③ Underwater Lights
- ④ Prop Zinc
- ⑤ Stern Thruster

- ⑥ Swim Platform Retractable Ladder
- ⑦ Trim Tabs
- ⑧ Prop
- ⑨ Rudder
- ⑩ Dunnage Box

## FUSE LOCATION & VALUES

### STD

The dash fuse blocks are located behind the hinged mirror located inside of the bathroom. Fuses are automotive blade type and all values are shown in amps.


**Dash Fuse Block #1**



**Dash Fuse Block #2**



**Navigation**

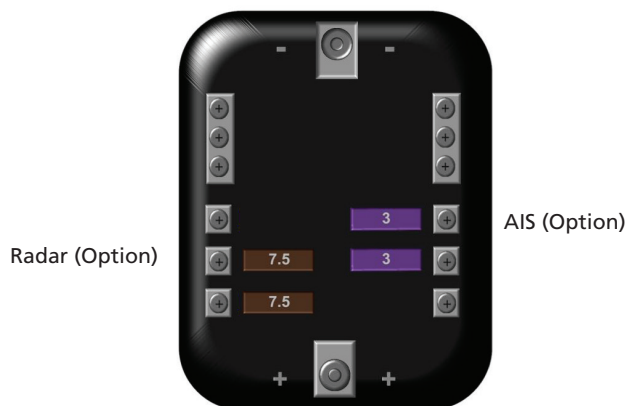



## FUSE LOCATIONS AND VALUES CONTINUED

### STD

These four blocks and fuses are located in the Quarter Berth aft storage area.




The bilge pumps operate automatically with electronic float switches when all switches and breakers are in the OFF position.


However, the BILGE PUMP and BILGE PUMP2 will run continuously once their switches are placed in the on position. Monitor the outflow accordingly. Do not run when dry.

Thruster Battery and Engine Battery fuse blocks are energized even when the battery switch is off.

### Thruster Battery

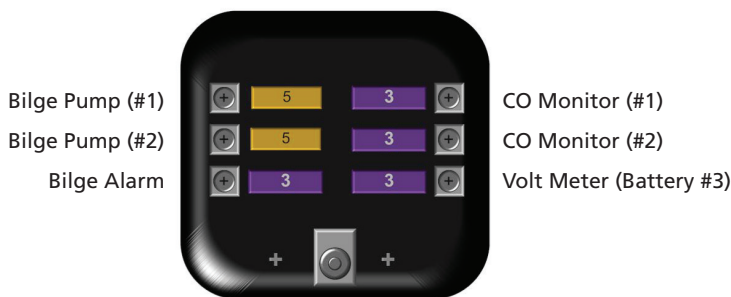


### PDP

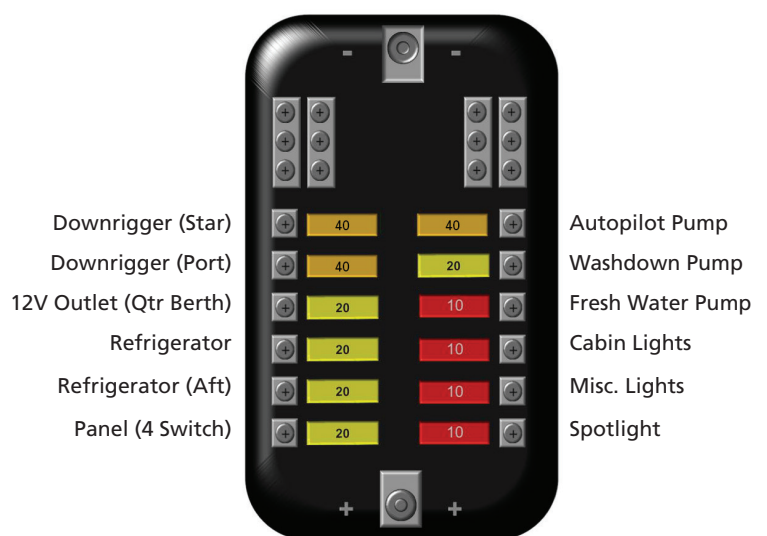

### Engine Battery




### Optional: Bridge

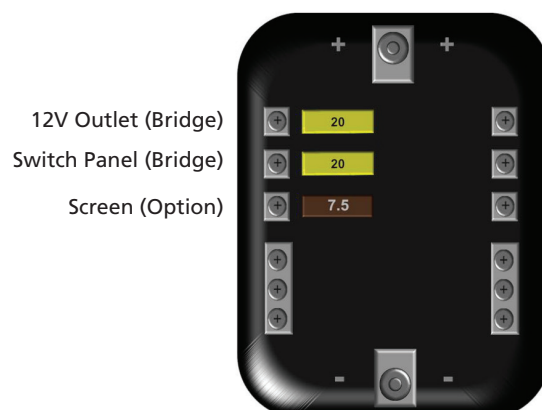

## MAIN CABIN AND COCKPIT LIGHTS

STD

|                         | Courtesy<br>Light Switch | V-Berth<br>Light Switch | Cabin<br>Light Switch | Head<br>Light Switch | Under Mattress<br>Light Switch |
|-------------------------|--------------------------|-------------------------|-----------------------|----------------------|--------------------------------|
| 1 Courtesy Lights       | ✓                        |                         |                       |                      |                                |
| 2 Deck Aft Lights       | ✓                        |                         |                       |                      |                                |
| 3 Cabin Lights          |                          |                         | ✓                     |                      |                                |
| 4 V-Berth Lights        |                          | ✓                       |                       |                      |                                |
| 5 V-Berth Bed Lights    |                          | ✓                       |                       |                      |                                |
| 6 Head Lights           |                          |                         |                       | ✓                    |                                |
| 7 Under Mattress Lights |                          |                         |                       |                      | ✓                              |

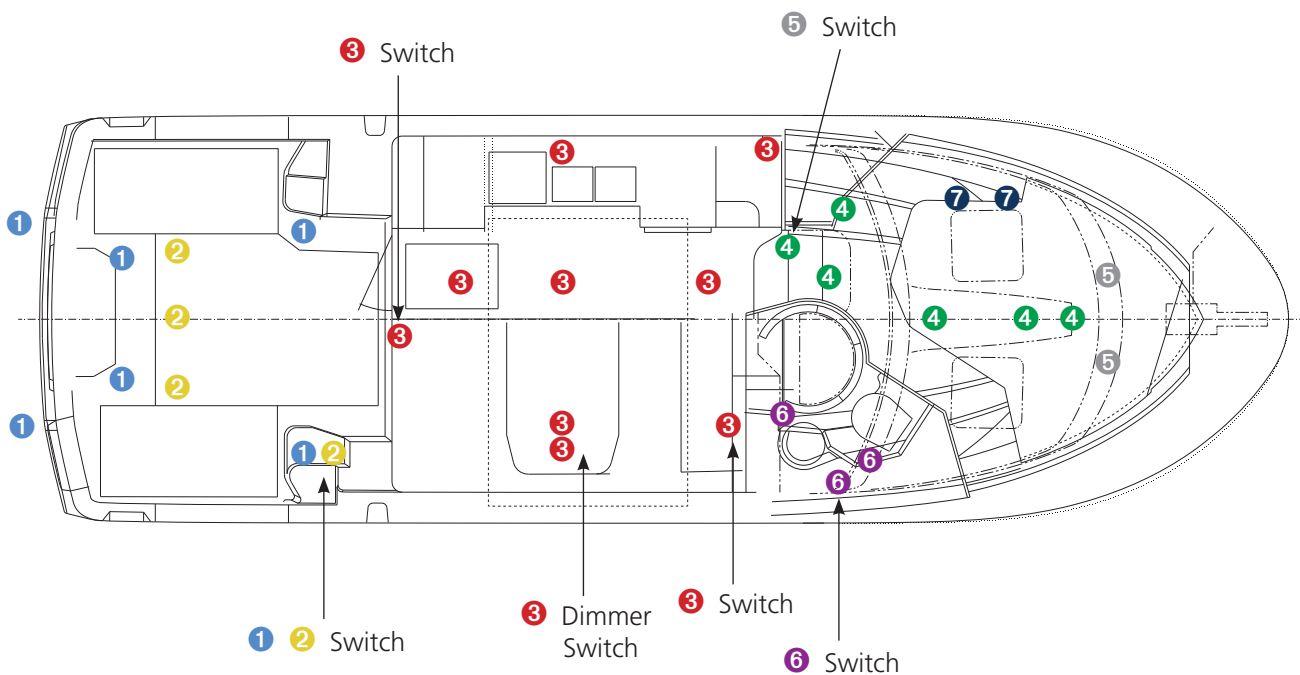

## BATTERY COMPARTMENT

### STD


(4) House Batteries, (1) Engine Battery, (1) Thruster Battery (generator shares), Inverter/Charger Inverter Fuse (150 AMP), Inverter/Charger Cutoff Switch (Group 27, 1 each - start battery, 5 each - deep cycle batteries)

### OPT

AGM (4) House Batteries, (1) Engine Battery, (1) Thruster Battery (generator shares), Inverter/Charger Inverter Fuse (150 AMP), Inverter/Charger Cutoff Switch (Group 31, 6 each - start/deep cycle batteries)



AGM batteries required for boats with solar panel.

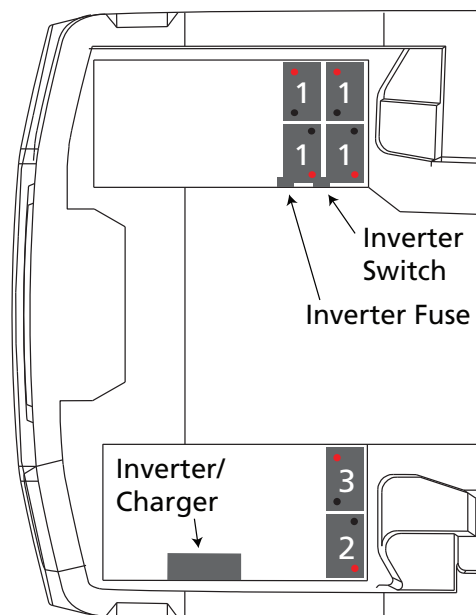

| Batteries    |
|--------------|
| 1 = House    |
| 2 = Engine   |
| 3 = Thruster |




## POWER DISTRIBUTION CENTER

### STD

Located in the starboard cockpit step.  
House, Engine, Thrusters and Crossover switch

- The parallel switch should always remain in the off position. While in the on position, the house and engine batteries will be combined as one for emergency start only.
- If the house bank drops below 10.8v you must reset the charging relay by switching on the parallel while the engine is running.

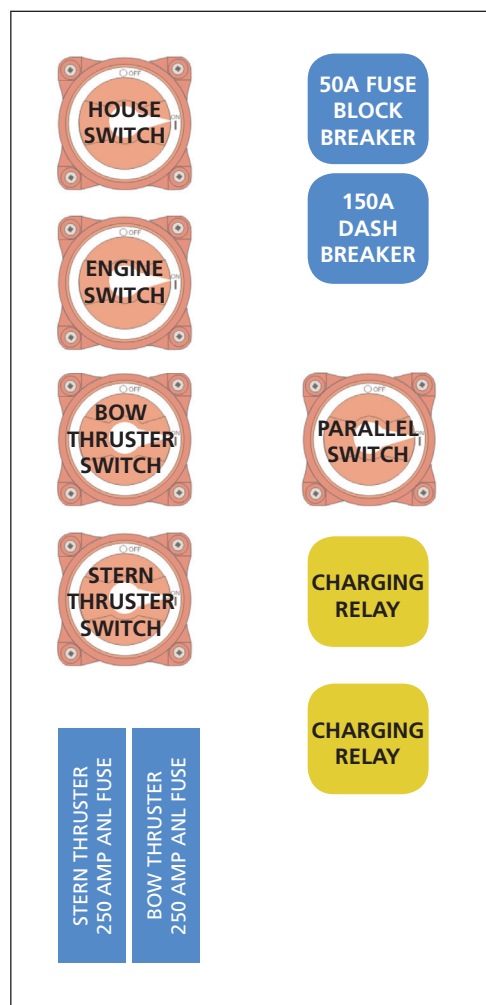

# AC DISTRIBUTION PANEL, ROTARY SWITCH & DC VOLT METER

**STD**

AC Distribution Panel

**OPT**

AC Rotary Selector Switch. Available with Generator




The AC Rotary Switch Selector Switch will determine which source of incoming 120 Volt power to use for your AC Distribution Panel.

## Inverter Bus

AC Distribution Panel  
with optional Air Conditioning  
and/or Generator


### 12V BATTERY MONITOR

1 = House  
2 = Engine  
3 = Thruster

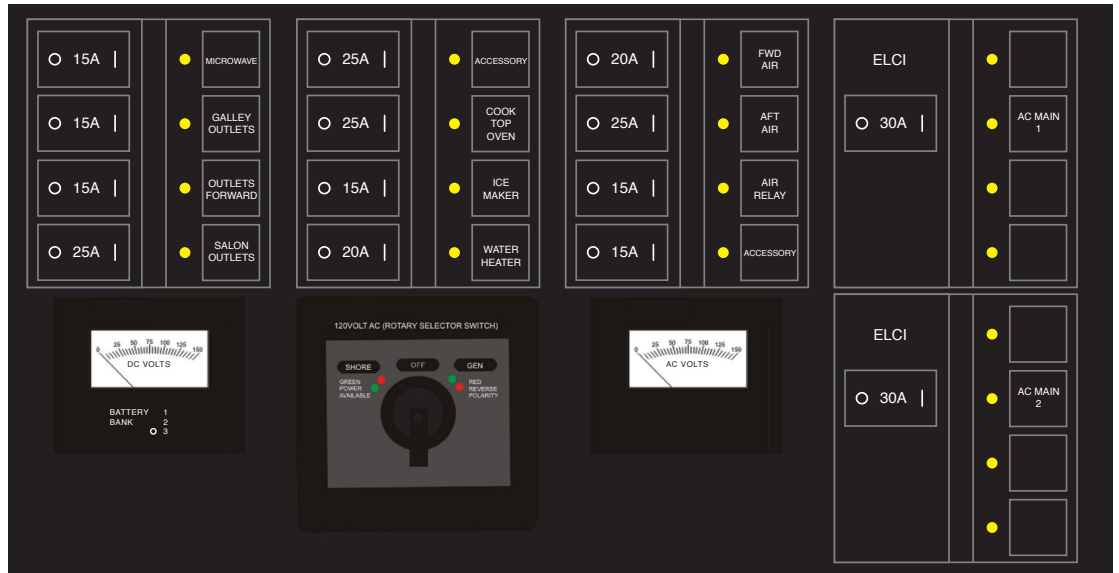

## Inverter Bus

AC Distribution Panel  
Standard

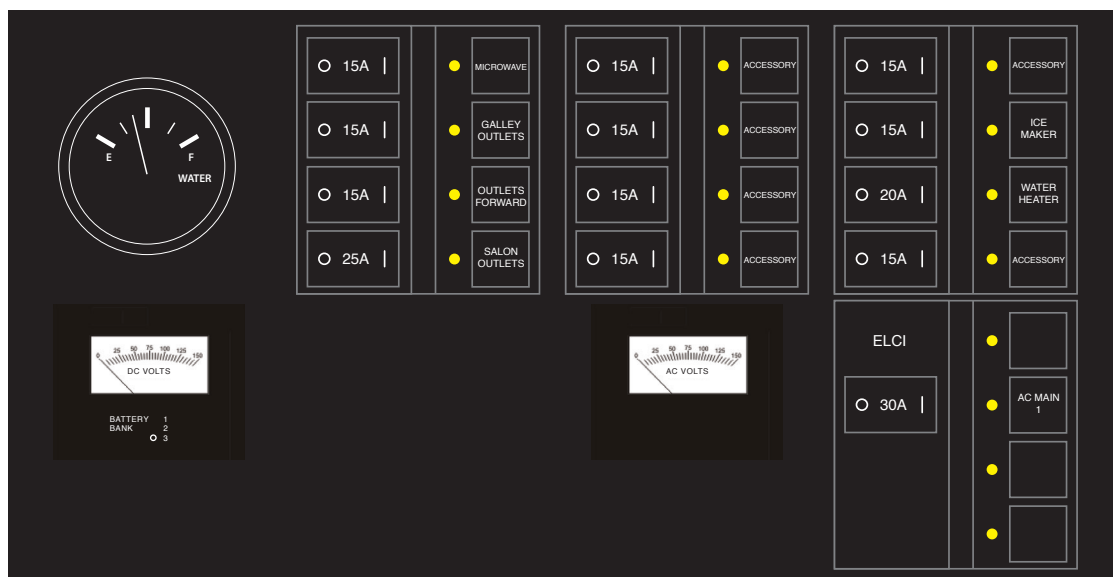

## FUEL SYSTEM, ENGINE, GENERATOR & WEBASTO FURNACE


**STD**

D6 Volvo 435 H.P. Diesel

**OPT**

Generator 5.0 KW Onan, Webasto Furnace

- There is a secondary on engine fuel filter that is not shown on this drawing. You will be able to find information about this filter in the diesel engine manual supplied with your boat.
- Fuel shutoff and all fuel filters are located on the Fuel Management Board, port side of engine room.

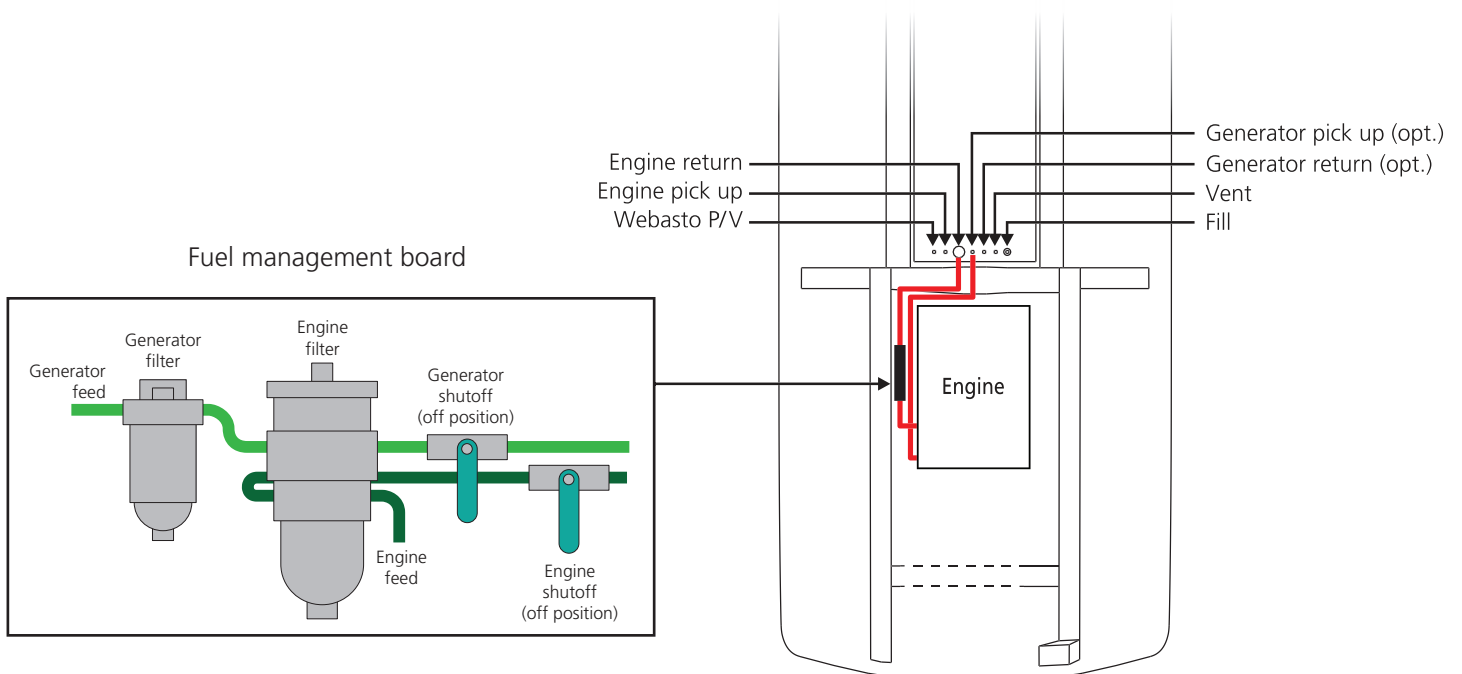




## WEBASTO FURNACE

**OPT**


Webasto furnace is located under access panel below range.  
The controller is located at the quarter berth power management center.  
The pump is in the salon floor hatch compartment.

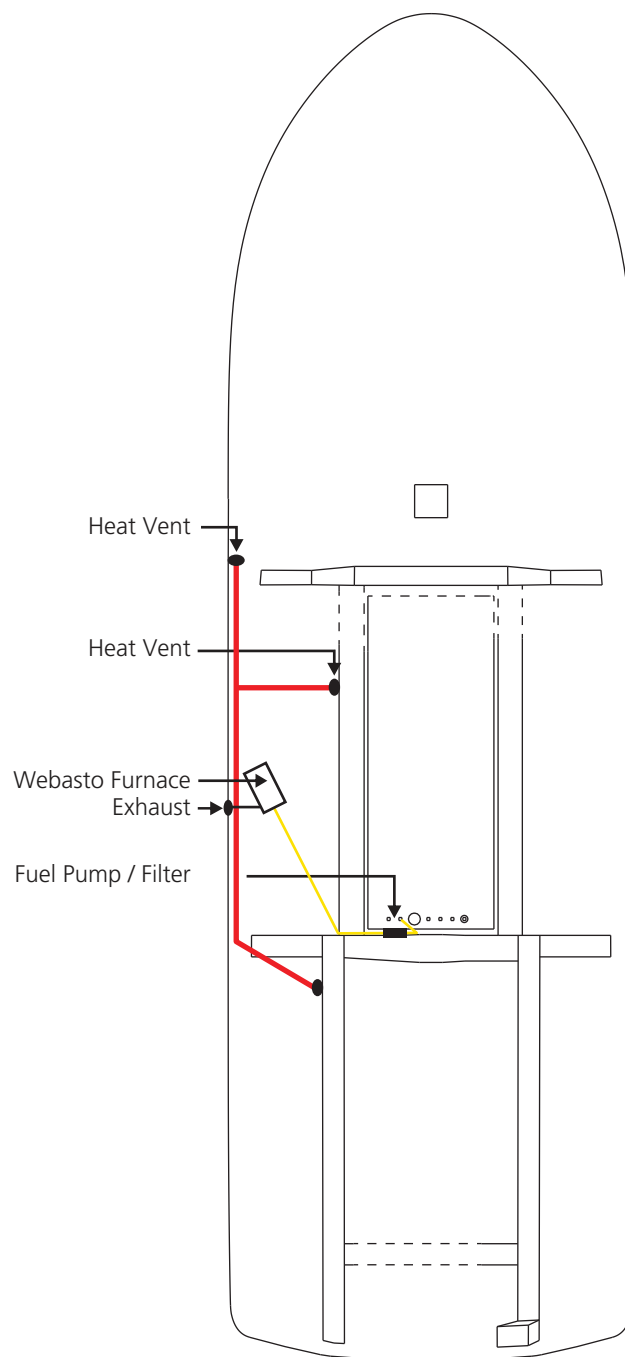

# AIR CONDITIONING SYSTEM

OPT


Air Conditioning System

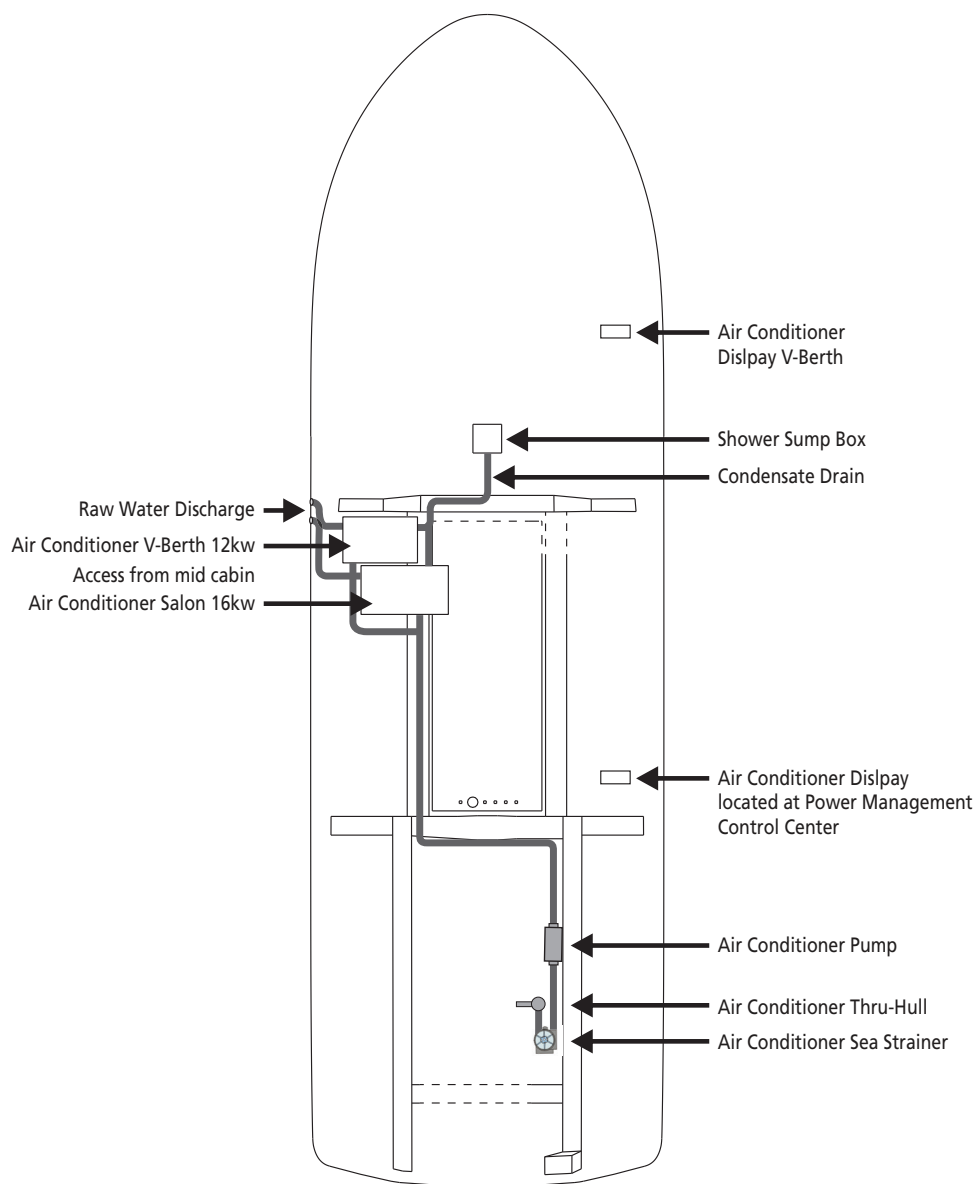

# GENERATOR

**OPT**

Generator 5.0 KW Onan  
\*Generator will start off of thruster battery #3

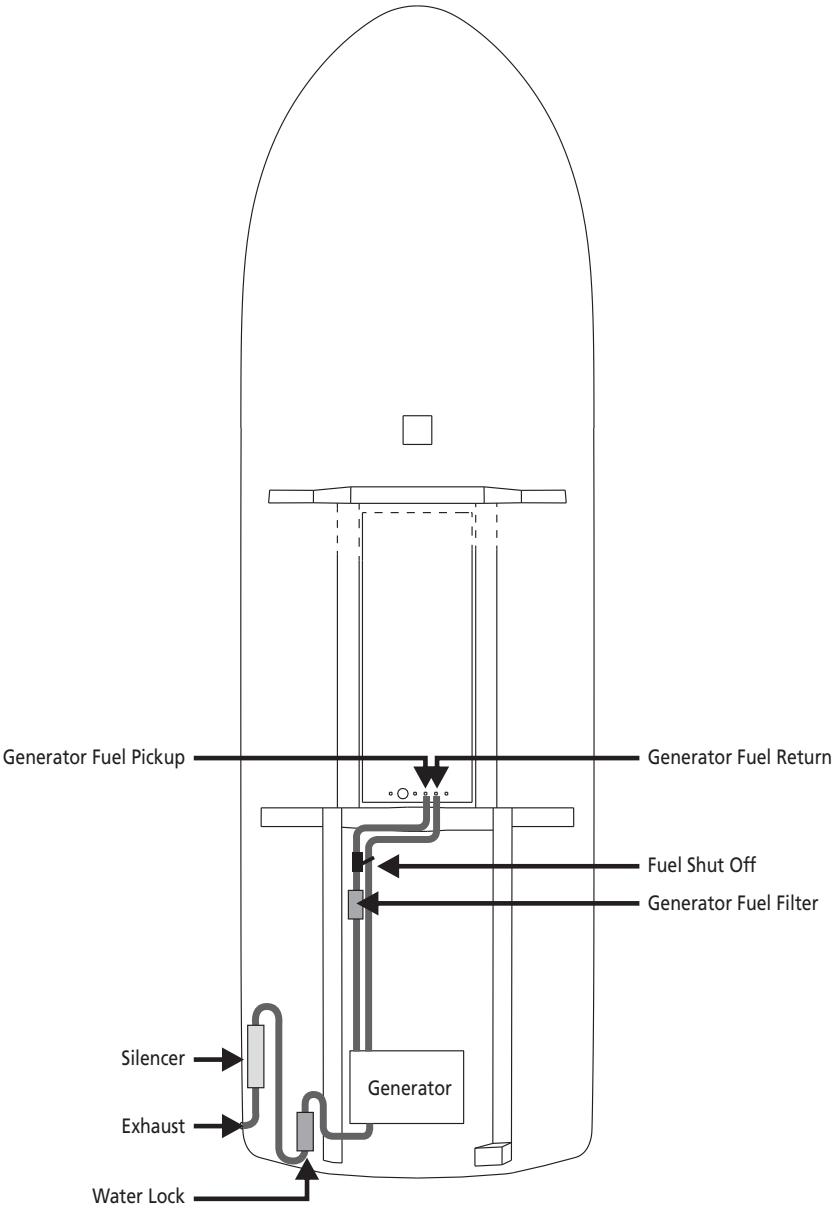


## SOLAR PANEL

### OPT

Solar panel 140 watt, with control panel


- The solar panel is designed to provide charging to the house & engine batteries. 90% of its charge is dedicated to the house battery and 10% is dedicated to the engine battery.
- The green light on the solar display indicates proper operation.
- The solar controller is located at the power management control center.
- Boats with solar panel require AGM battery upgrade.

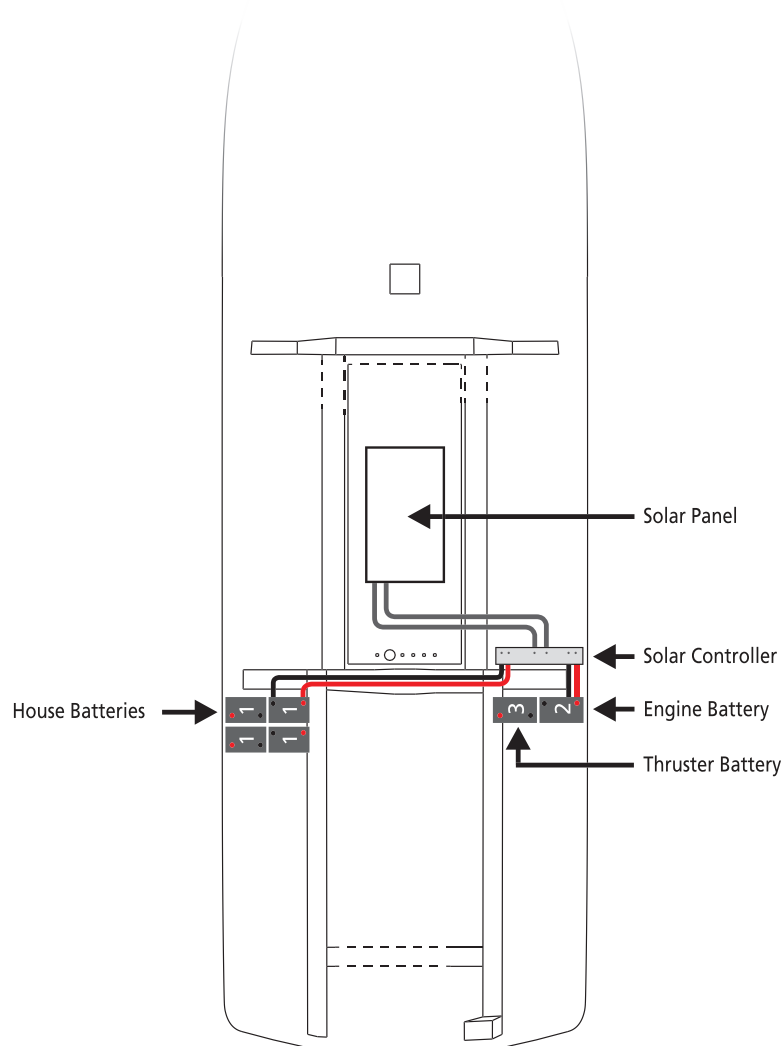

# SHORE POWER LAYOUT

**STD**


Shore Power

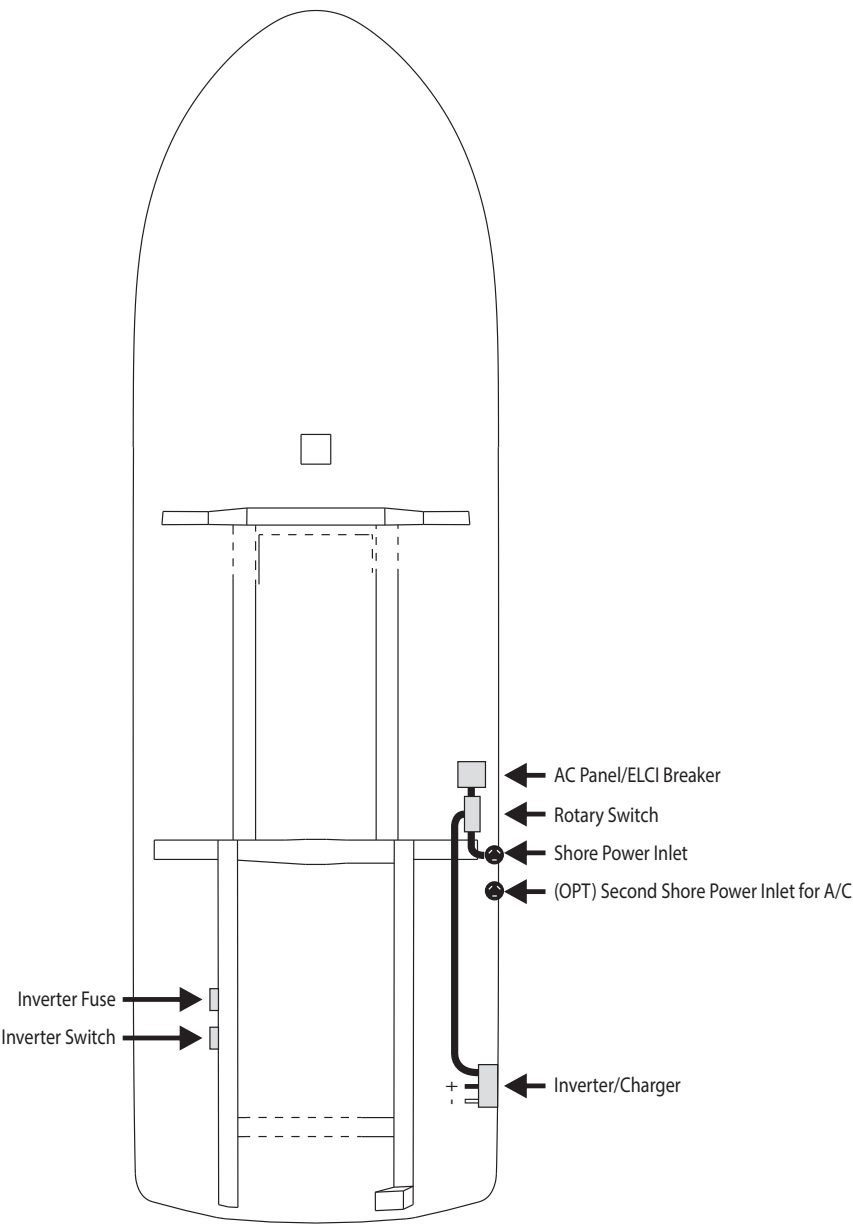

## CLOSED ENGINE COOLING SYSTEM

### STD


Provides alternate heating system for the Fresh Water Heater and provides primary heating source for the Forced Air Cabin Heater. This system is also designed to provide cooling to the internal components of your engine. Please refer to your engine operations manual for more information.

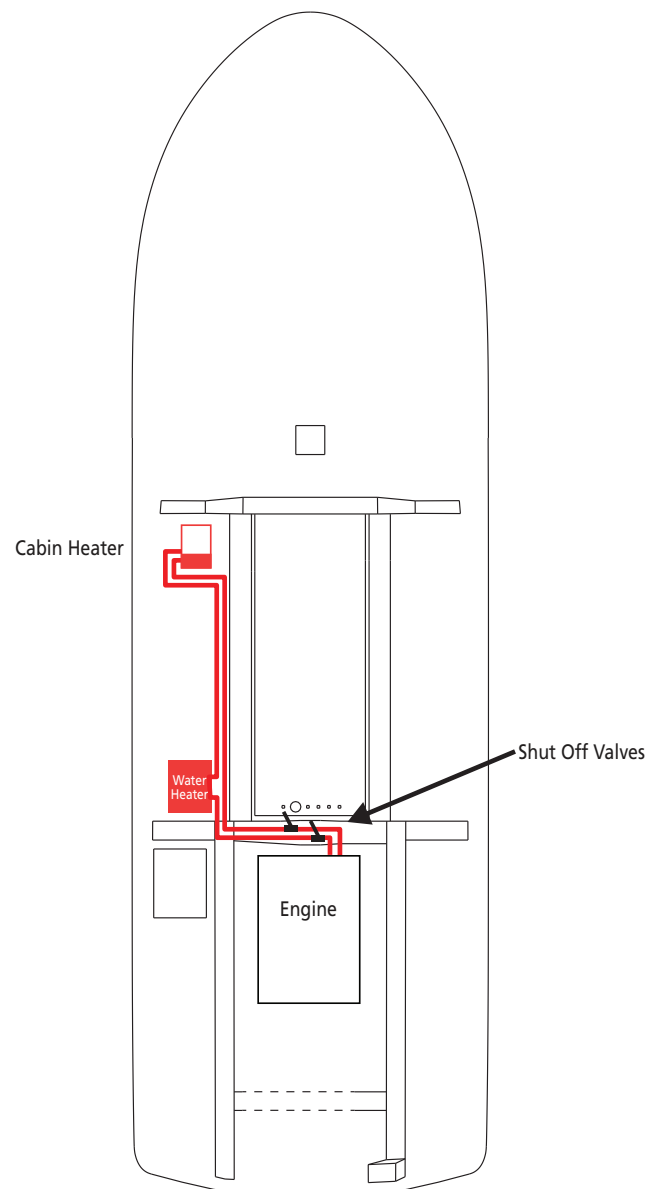

# SEA STRAINER SYSTEM

**STD**

Multi Port Sea Strainer for Marine Toilet and Raw Water Washdown

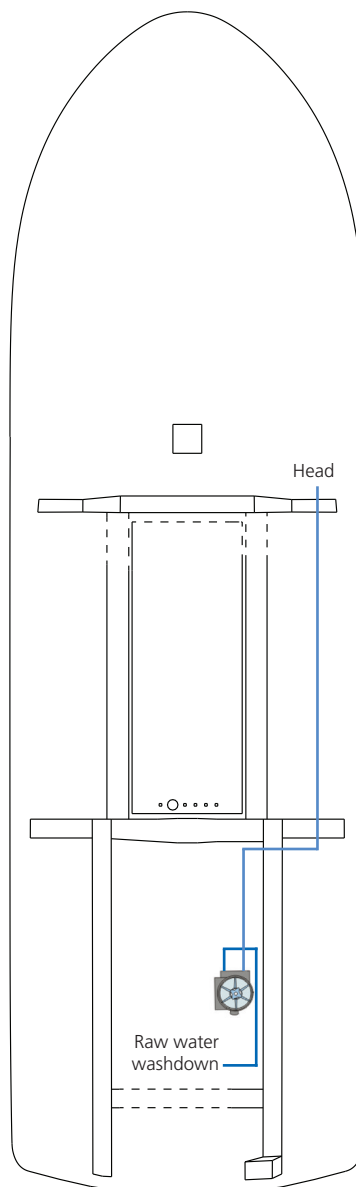




## RAW WATER WASH DOWN

**STD**

Johnson Aqua Jet 5.2 GPM


- The raw water washdown pump and all components shown are accessible from the rear of the engine compartment.

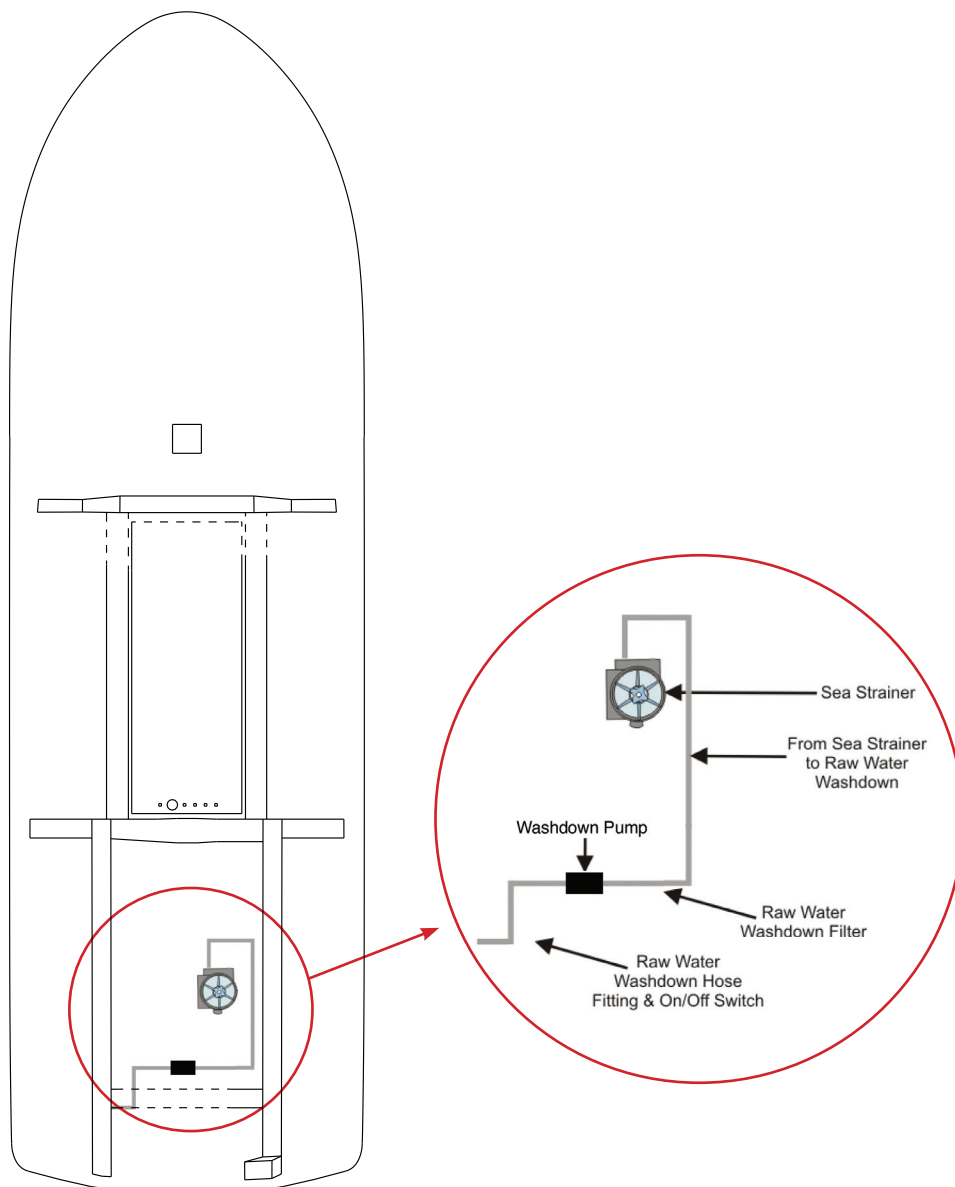

# FRESH WATER PLUMBING SYSTEM

**STD**

60 Gallon Fresh Water Tank, 11 Gallon Water Heater, 4.0 GPM Fresh Water Pump.

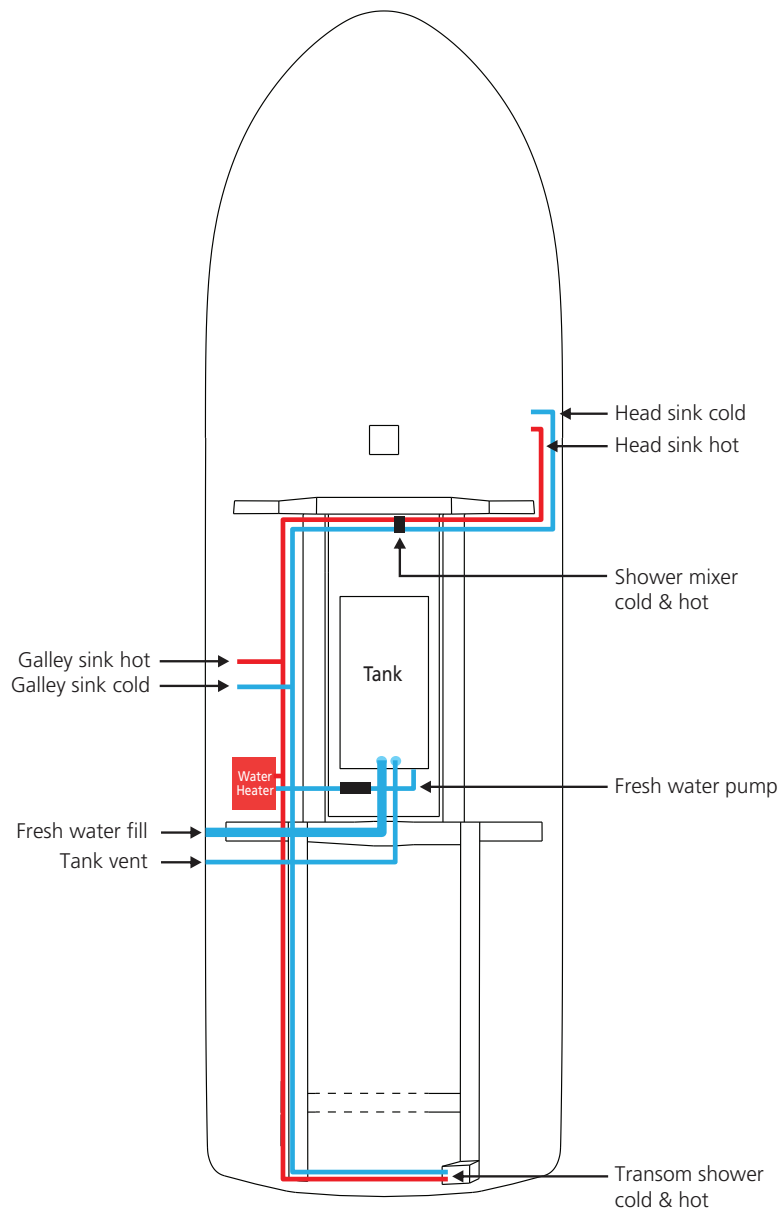


## SHOWER SUMP

**STD**

12V, 800 GPH

(Sump should be inspected for debris on a regular basis if shower is used frequently.)

- The shower sump box is located underneath the center removable teak and holly floor.

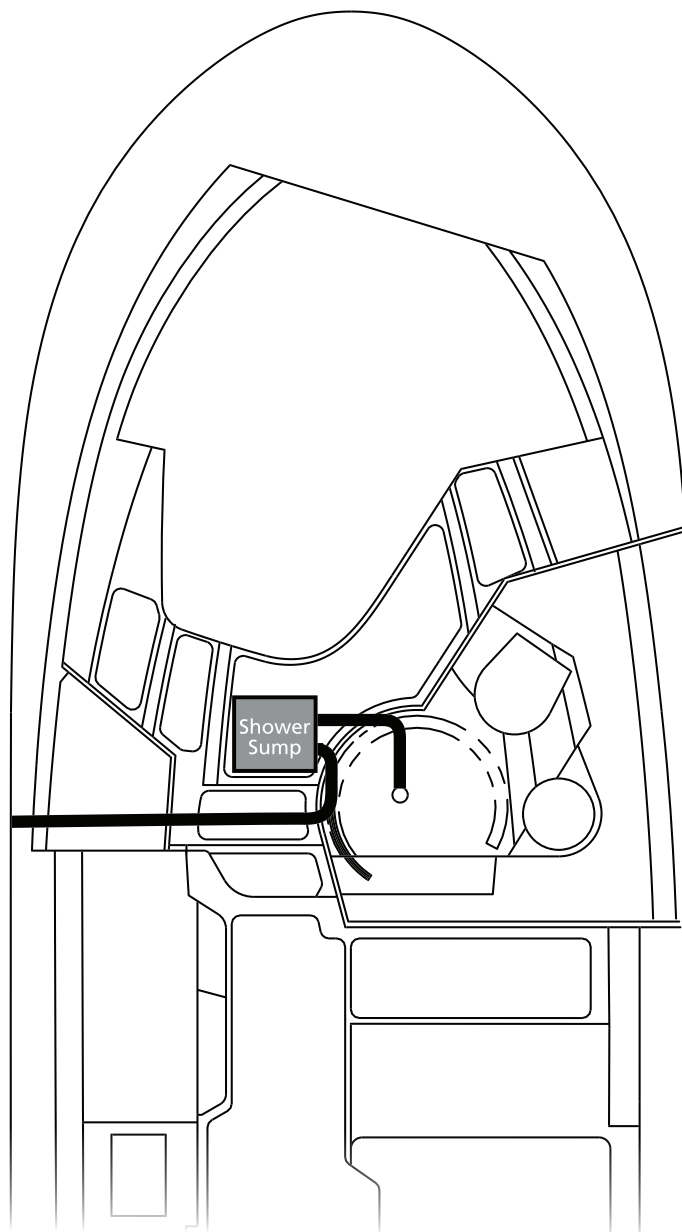

## BILGE PUMP SYSTEM


**STD**

12V 1000GPH



The bilge pumps operate automatically with electronic float switches when all switches and breakers are in the OFF position.

However, the BILGE PUMP and BILGE PUMP2 will run continuously once their switches are placed in the on position. Monitor the outflow accordingly. Do not run when dry.

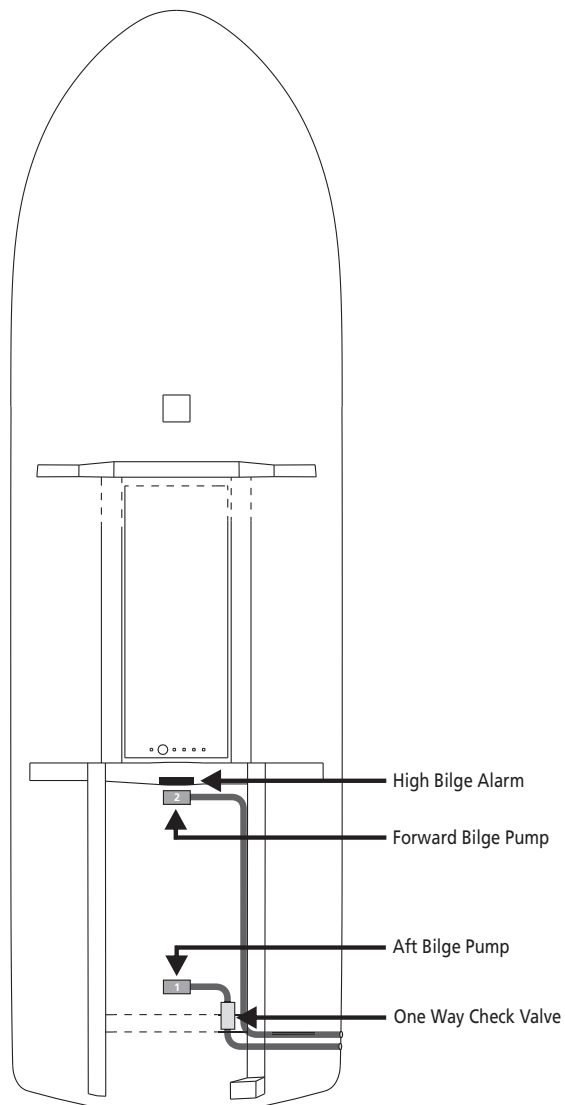

## WASTE SYSTEM WITH MACERATOR PUMP

**STD**



40 Gallon Tank with Macerator Pump Out (Opt.), Standard Dockside Pump Out, and Vent




Waste tank fill level can be monitored by checking the electronic display in the head compartment. Green = Empty, Yellow = Half, Red = Full. Pump out can be done with the macerator or standard dockside pump out.



Waste tank pump out stations are widely available. Please follow the directions carefully for the pump out equipment you are using to avoid damage to the waste system.



Boat owner is responsible for following all applicable laws when using the macerator system to pump out into the surrounding waters.

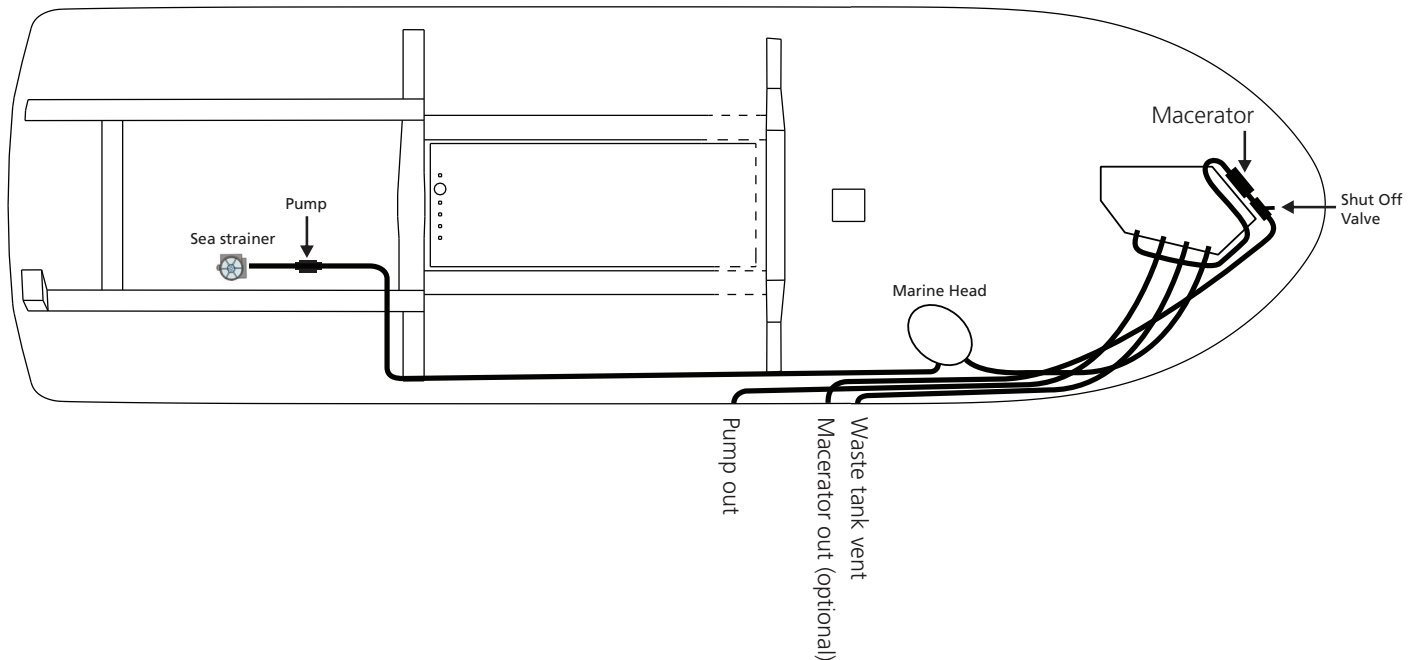

# MAST SET UP AND TAKEDOWN

## SEDAN AND SPORT

### MAST SET UP PROCEDURE

1. Remove the two black plastic wing nuts from the mast base.
2. While supporting the mast, remove the pin in the support bar.
3. Raise the mast to its full extension and ensure that it fits correctly over the mounting studs on the roof mounting plate.
4. Secure the stainless steel retaining bar in the appropriate rubber clip attached to the hard top.
5. Attach the two black plastic wing nuts to the mounting studs and hand tighten securely.

### MAST TAKE DOWN PROCEDURE

1. Remove the two black plastic wing nuts from the mast base mounting studs.
2. Carefully lower the mast onto the stainless steel support bar and attach retaining pin.
3. Attach the black plastic wing nuts back onto the screws on the mast mounting plate and secure them for storage by hand tightening.
4. Recommend securing the mast with a tie down.

## COMMAND BRIDGE

### MAST SET UP PROCEDURE

1. Remove retainer clip from bottom end of support plate.
2. Using support pole, push mast into the upright position and secure with retaining clip to fitting on solar panel support bar.
3. Attach mast sides to port and starboard aft seat backs with retaining clips.
4. Attach port and starboard forward support arms to seat fittings with retaining clips.

### MAST TAKE DOWN PROCEDURE

1. Detach port and starboard forward support arms from seat fittings.
2. Detach mast sides from port and starboard aft seat backs.
3. Release mast fittings from solar panel support bar and lower.
4. Install retainer clip on bottom end of support plate.


### BRIDGE SET UP

Always transport boat with Moving Bridge in the down position resting on support blocks and secured with provided ratchet strap. Helm seat should always be removed and stowed in main cabin.

To set Moving Bridge to upright position - remove ratchet strap - at that time the bridge should easily be lifted into the upright position. Move stainless support legs into retention blocks and flop latch into place to secure support legs.


To set bridge back into the transport position - disengage retention latches pull support legs aft and push bridge down to contact support blocks - secure with ratchet strap.

# CUTWATER 30 WIRING SCHEMATIC (ACC. 1)

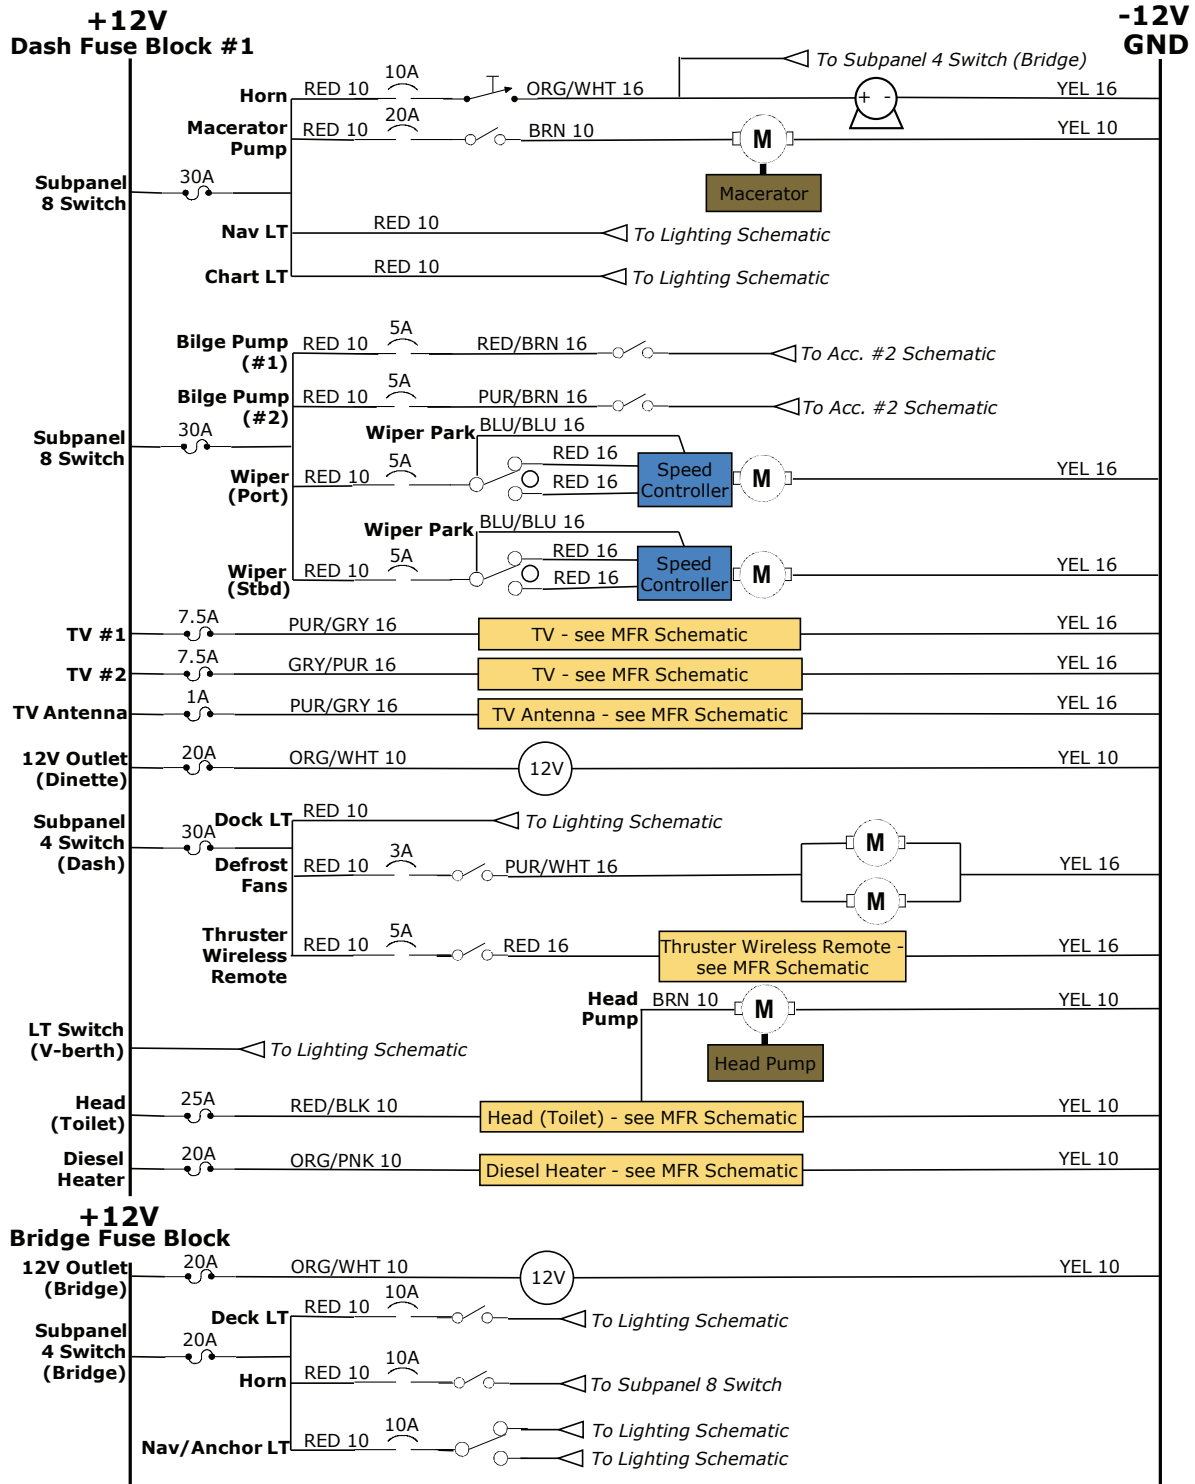





# CUTWATER 30 WIRING SCHEMATIC (ACC. 2)

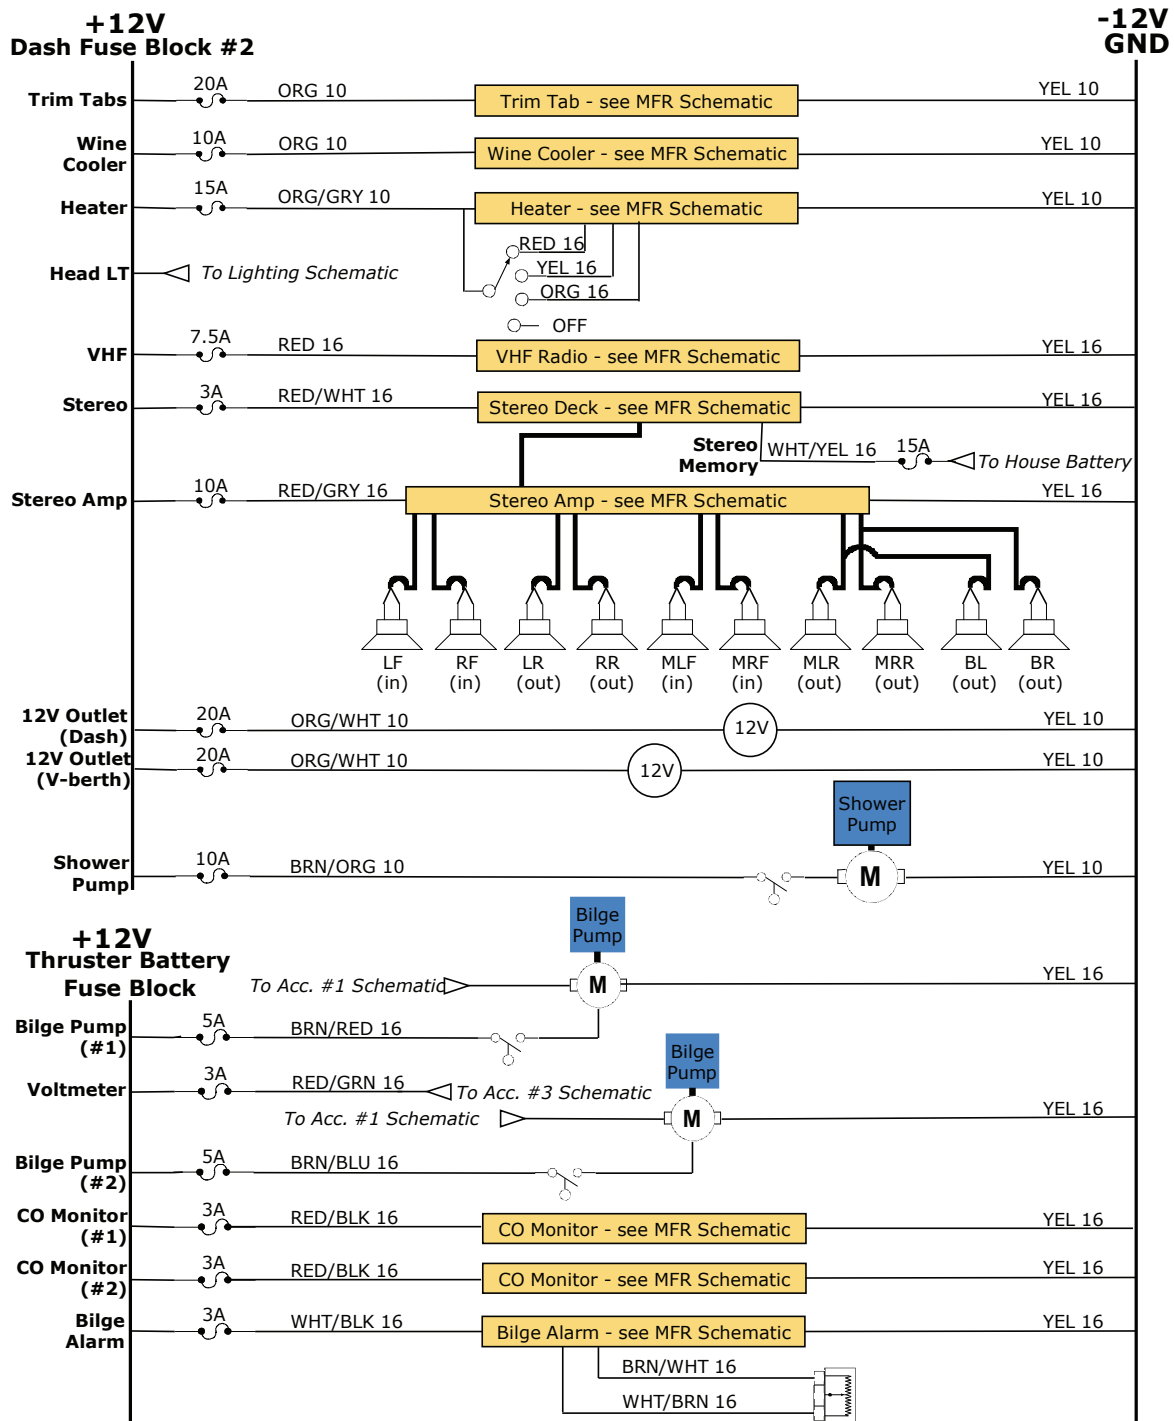


# CUTWATER 30 WIRING SCHEMATIC (ACC. 3)

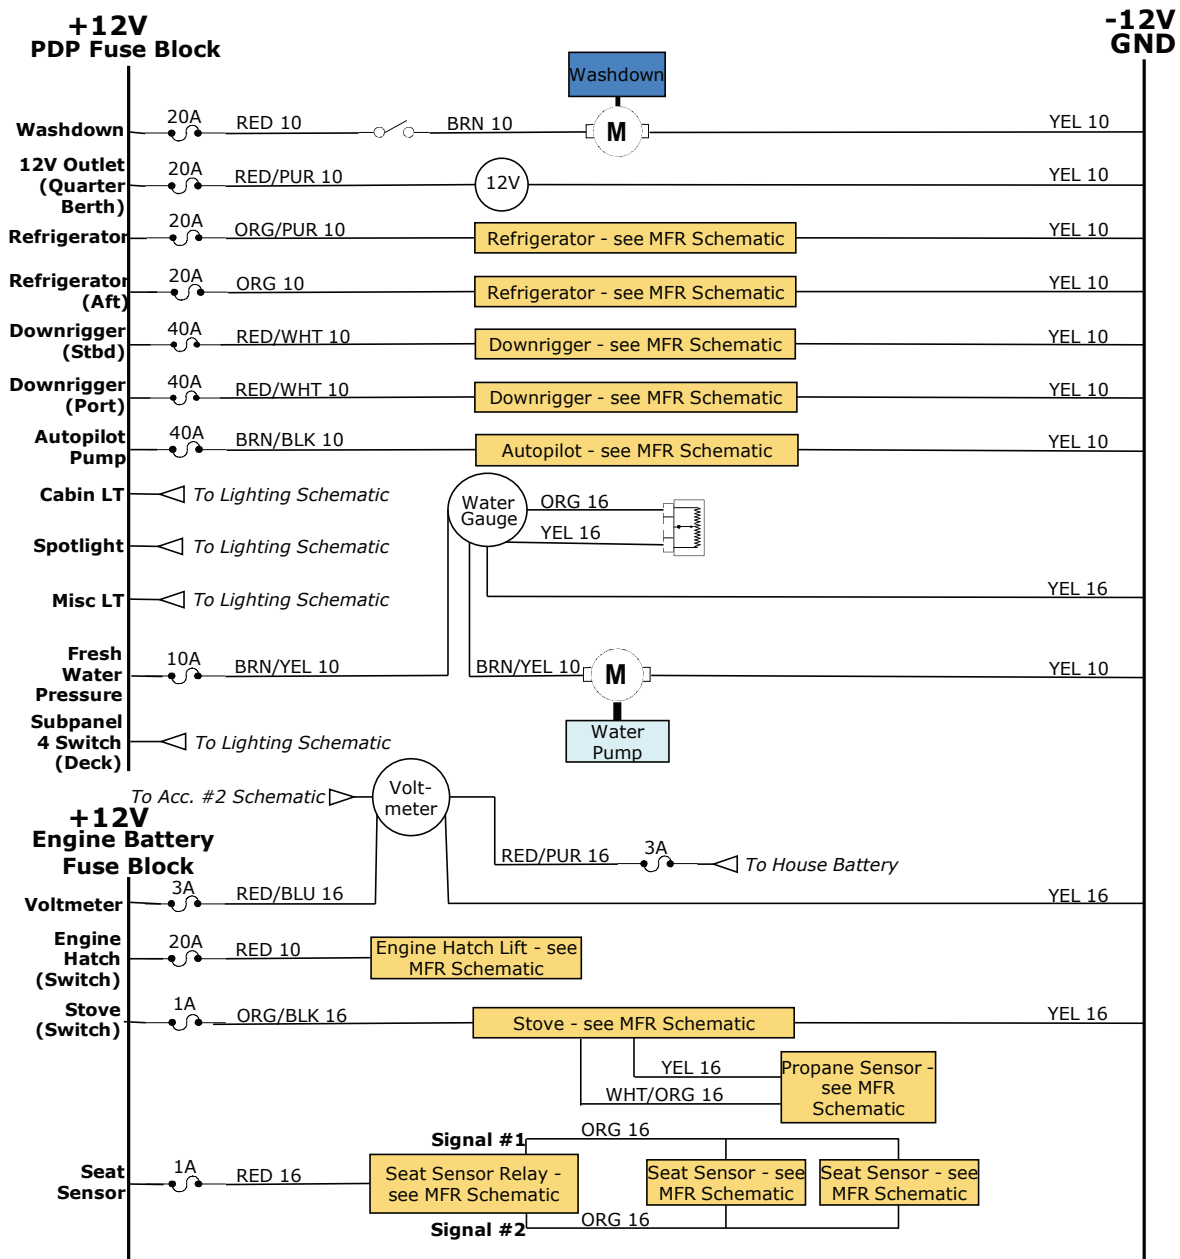


## SYMBOL KEY

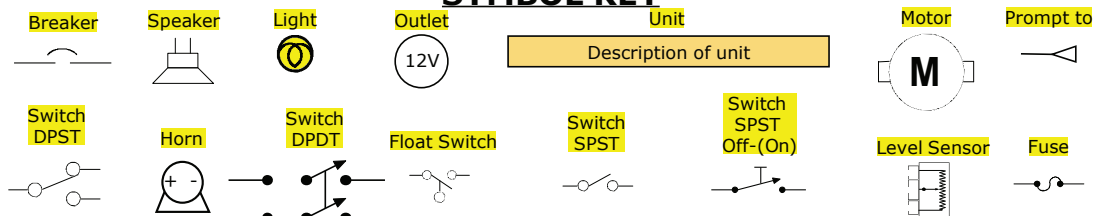

# CUTWATER 30 WIRING SCHEMATIC (LIGHTING)

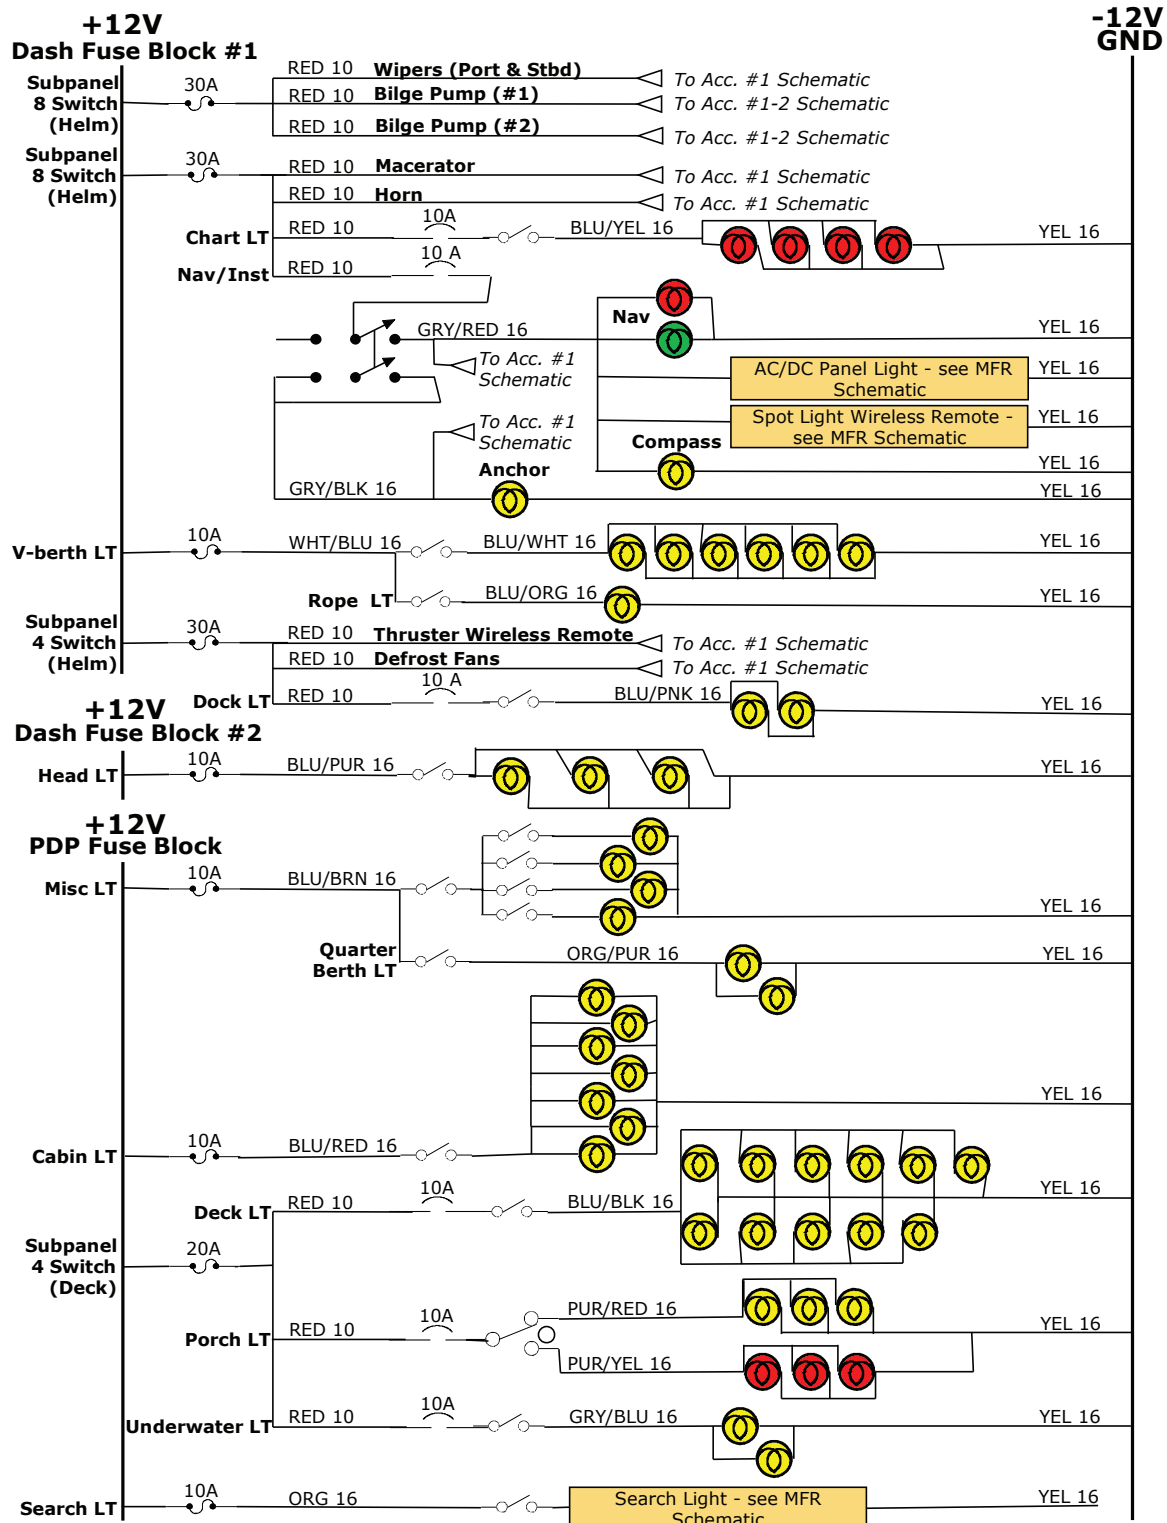


## CUTWATER 30 WIRING SCHEMATIC (P.D.P.)

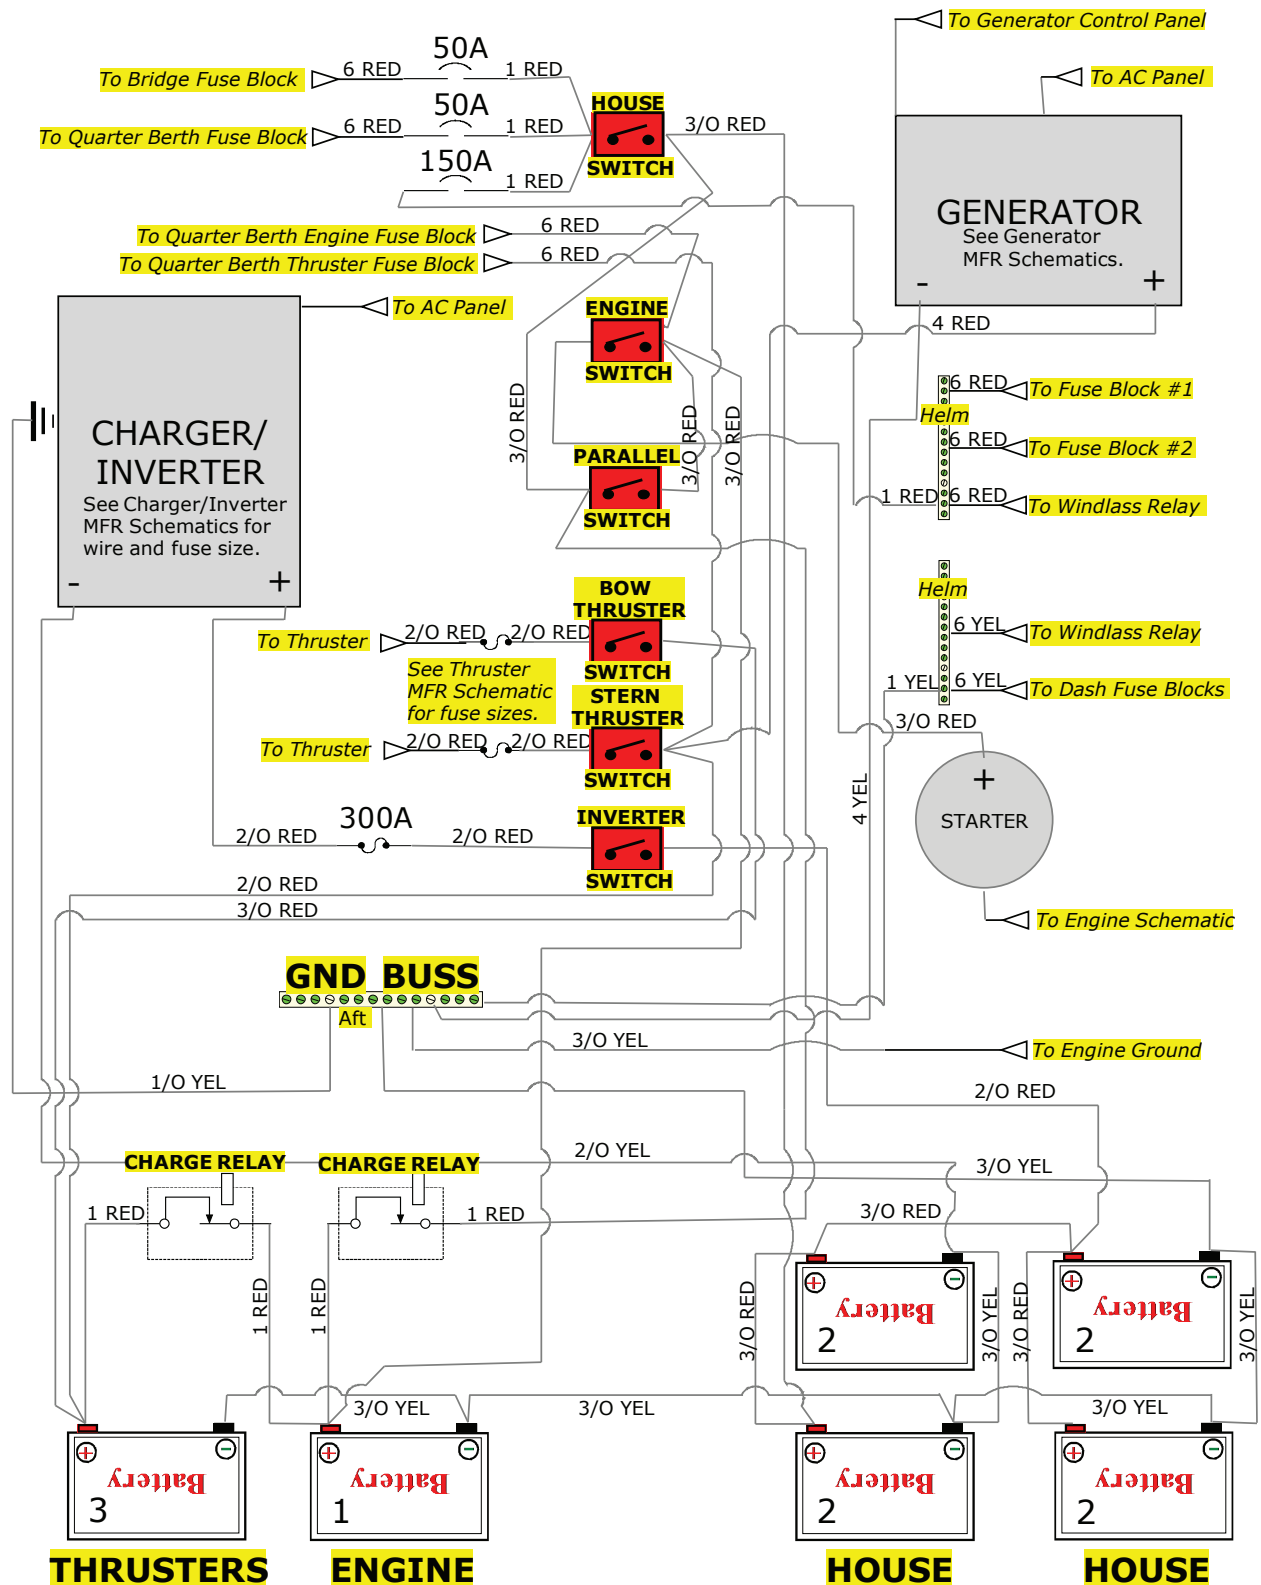


# WORKING DECK

STD

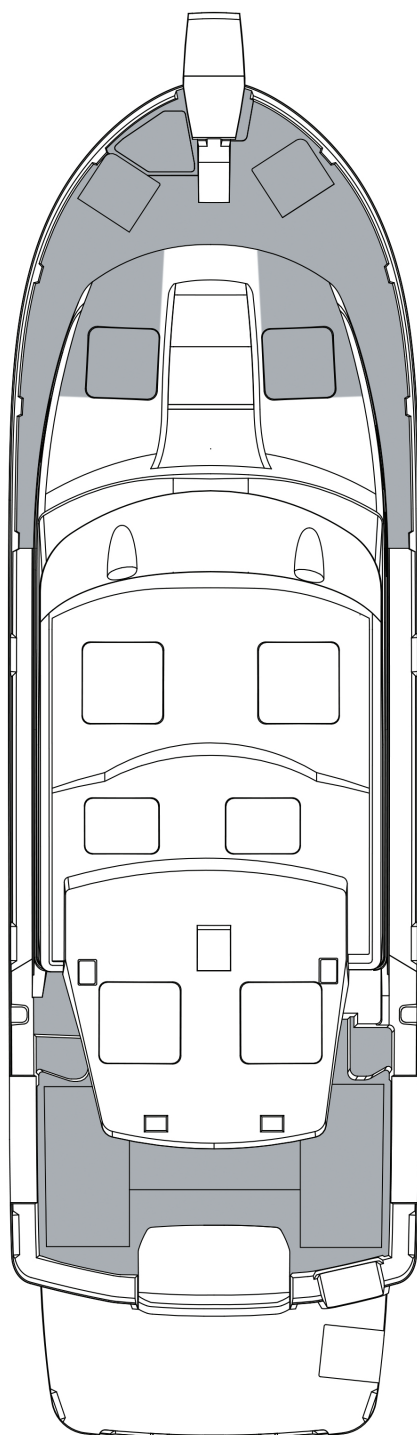

Sedan

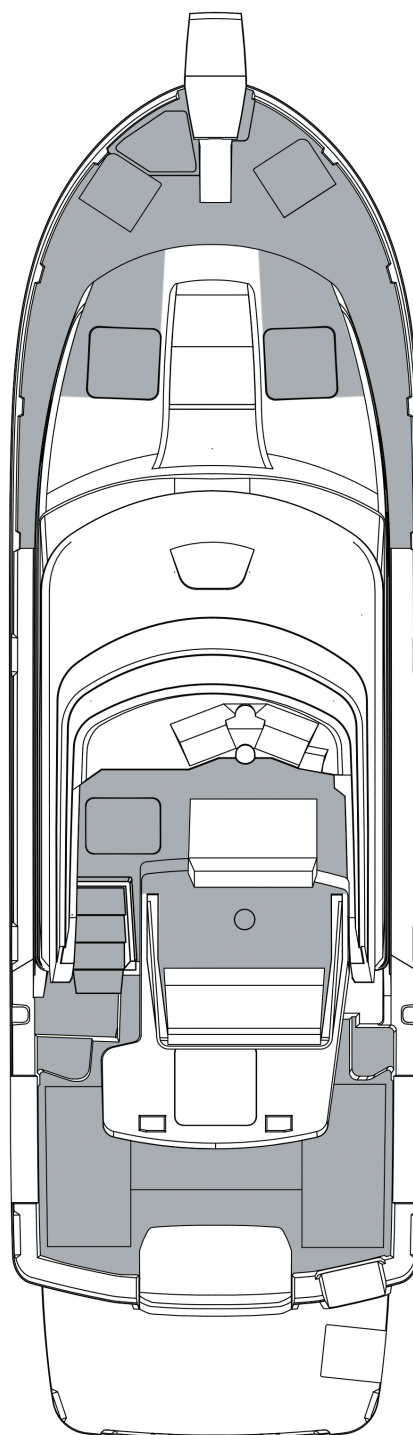

Command Bridge

# CARE AND MAINTENANCE



The following checklists are examples and are not all inclusive and are provided only as a guide. Please customize to your personal needs. Consult your engine and trailer user manuals for additional information.

## EXAMPLE OF A PREPARATION FOR THE ROAD CHECKLIST

### TOW VEHICLE – PRIOR TO USE

- ☐ Test Lights.
- ☐ Check brakes.
- ☐ Check tire pressure and condition.
- ☐ Check hitch related electrical connections.

### TRAILER – PRIOR TO USE

- ☐ Check registration
- ☐ Check rollers and bed rails.
- ☐ Check wheel bearings and lubricate as required.
- ☐ Check winch.
- ☐ Test electrical connection and lights.
- ☐ Check tire pressure and condition.
- ☐ Check safety chains.
- ☐ Check boat straps.
- ☐ Check braking system.
- ☐ Check hitch for proper connection and lock down.
- ☐ Install safety chains (cross under hitch).
- ☐ Remove tire blocks.

### BOAT – PRIOR TO USE WITH TRAILER


- ☐ Lower mast.
- ☐ Lower VHF antenna.
- ☐ Secure the Bimini awning frame.
- ☐ Raise and secure swim platform ladder.
- ☐ Set all switches and breakers to the OFF position, Including Thruster/Windlass cutoff switch
- ☐ Close and secure all windows, ports and vents.
- ☐ Lock cabin.
- ☐ Center rudder.
- ☐ Remove Drain Plug

# EXAMPLE OF A SPRING PRE-LAUNCH CHECKLIST

## CLEANING

- ☐ Remove debris from scuppers and scupper drains.
- ☐ Clean hull using a mild biodegradable detergent and then wax.
- ☐ Clean topsides and decks using a mild biodegradable detergent and then wax.
- ☐ Clean and polish all bright work.
- ☐ Clean and oil teak.
- ☐ Clean windows, ports, and hatches.
- ☐ Clean bimini cover.
- ☐ Check and clean anchor, rode, and anchor storage compartment.

## INSPECTION

- 
- ☐ Check Drain Plug
  - ☐ Check spare parts and tools and replace as necessary.
  - ☐ Check wiper blades.
  - ☐ Check swim platform.
  - ☐ Inspect and test trim tabs.
  - ☐ Check condition of bottom paint.
  - ☐ Check windlass.
  - ☐ Verify electronics for correct operation.
  - ☐ Check all inside and outside lights.
  - ☐ Macerator shut off valve in proper position and secured.
  - ☐ Inspect and verify position of all sea cocks and shut off valves.
  - ☐ Check alarms for proper operation.
  - ☐ Check fluid levels.

## SAFETY EQUIPMENT

- ☐ Sound signaling device.
- ☐ Check flares and their expiration dates.
- ☐ Check personal flotation devices.
- ☐ Check fire extinguishers and their fill dates.
- ☐ First aid kits.
- ☐ Throw cushions.

## GALLEY

- ☐ Check stove for proper operation.
- ☐ Check everyday utensil stock.

## DOCUMENTS

- ☐ Registration sticker.
- ☐ Insurance papers and Passports.
- ☐ Boat Inspection sticker.
- ☐ Charts and float plan forms.



# EXAMPLE OF WINTER STORAGE CHECKLIST

## GENERAL MAINTENANCE

- ☐ Fill Fuel Tank and add a fuel stabilizer.
- ☐ Empty and clean black water tank.
- ☐ Empty fresh water tank, winterize – use a non-toxic antifreeze per manufacturer's directions. Ensure to cycle through all lines, water heater, shower sump box and transom shower.
- ☐ Winterize black water tank as necessary based on weather and cycle through macerator pump and pump out line.
- ☐ Check bilge area for oil and for proper operation
- ☐ Check zincs and replace as necessary.
- ☐ Check and clean water strainer.
- ☐ Clear barnacles and debris from hull fittings.
- ☐ Trickle charge batteries every 30-60 days.
- ☐ Vent boat to prevent mildew.
- ☐ Check trailer tire pressure and condition.
- ☐ Check trailer braking system.
- ☐ Check trailer bearings.
- ☐ Remove Drain Plug.
- ☐ Turn off all battery cutoff switches.

## ENGINE

- ☐ Check raw water impeller.
- ☐ Winterize sea strainer and all raw water lines outside of closed cooling system.
- ☐ Flush sea strainer system with fresh water.
- ☐ Check all fluid levels.
- ☐ Check all hose fittings.
- ☐ Check engine maintenance requirements.
- ☐ Inspect and verify position of all sea cocks and shut off valves.

## GALLEY

- ☐ Empty, clean and freshen refrigerator.
- ☐ Remove all dry food from storage.

## Generator

- ☐ Winterize generator sea strainer and all lines outside of closed cooling system.

## Air Conditioning

- ☐ Winterize all raw water cooling lines by cycling through all lines until it exits port side thru-hulls.

Cutwater Boats recommends that to ensure proper winterization and to protect your valuable asset that you have an authorized dealer perform all winterization and service procedures.

# REFERENCE MATERIAL

The following table contains a list of reference materials provided by Cutwater that are contained under separate manuals.

| <b>EQUIPMENT</b>         | <b>ORIGINAL MANUFACTURER</b>                   |
|--------------------------|--|
| Navigation System        | Garmin   |
| Engine C30               | Volvo D6 435 H.P., gear model<br>ZF 15 HS80 AE |
| Furnace, diesel          | Webasto  |
| Trim Tabs                | Bennett  |
| Thrusters                | Side Power                                     |
| Search Light             | ITT  |
| Raw Water Wash Down      | Johnson Pump                                   |
| Water Pump               | Johnson Pump                                   |
| Heater                   | Heater Craft                                   |
| Water Heater             | Webasto Isotemp                                |
| Refrigerator             | Nova Kool                                      |
| Compass                  | Ritchie  |
| Power Cord               | Furion   |
| Kitchen Faucet           | Scandvik                                       |
| Head Faucet              | Scandvik                                       |
| Sea Strainer             | Marine Hardware                                |
| Battery Charger/Inverter | (Pro Mariner)                                  |
| AC Rotary Switch         | Blue Sea                                       |
| AC Distribution Panel    | Blue Sea                                       |
| DC Distribution Panel    | Blue Sea                                       |
| Steering System          | Ultraflex                                      |
| Windlass                 | Lewmar   |
| Generator                | Onan 5.0 kw                                    |
| Air Conditioner          | Webasto FCF Series                             |

# CONTACTS

## ***Customer Service***

Andrew Custis Customer Service Manager

Phone 253-839-5213

AndrewCustis@cutwaterboats.com

## ***Web Site***

[www.Cutwaterboats.com](http://www.Cutwaterboats.com)

## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

All rights reserved. Reproduction or translation by any means in whole or in part is not permitted without written authorization from Cutwater. The information contained herein is correct to the best of Cutwater knowledge and the contents may change without notice and without incurring obligation. 111016



**Phone 800.349.7198**

Fax 866.408.9516

[cutwaterboats.com](http://cutwaterboats.com)

17341 Tye St. S.E  
Monroe, Washington 98272